

AD-A070 238


MICHIGAN UNIV ANN ARBOR DEPT OF NAVAL ARCHITECTURE --ETC F/6 13/10  
ELECTRONICS AND CONTROL FOR THE SHIPBOARD PRESSURE MEASUREMENT --ETC(U)  
MAY 79 V A PHELPS, R KELLER


UNCLASSIFIED

NL

| OF |

AD  
A070238

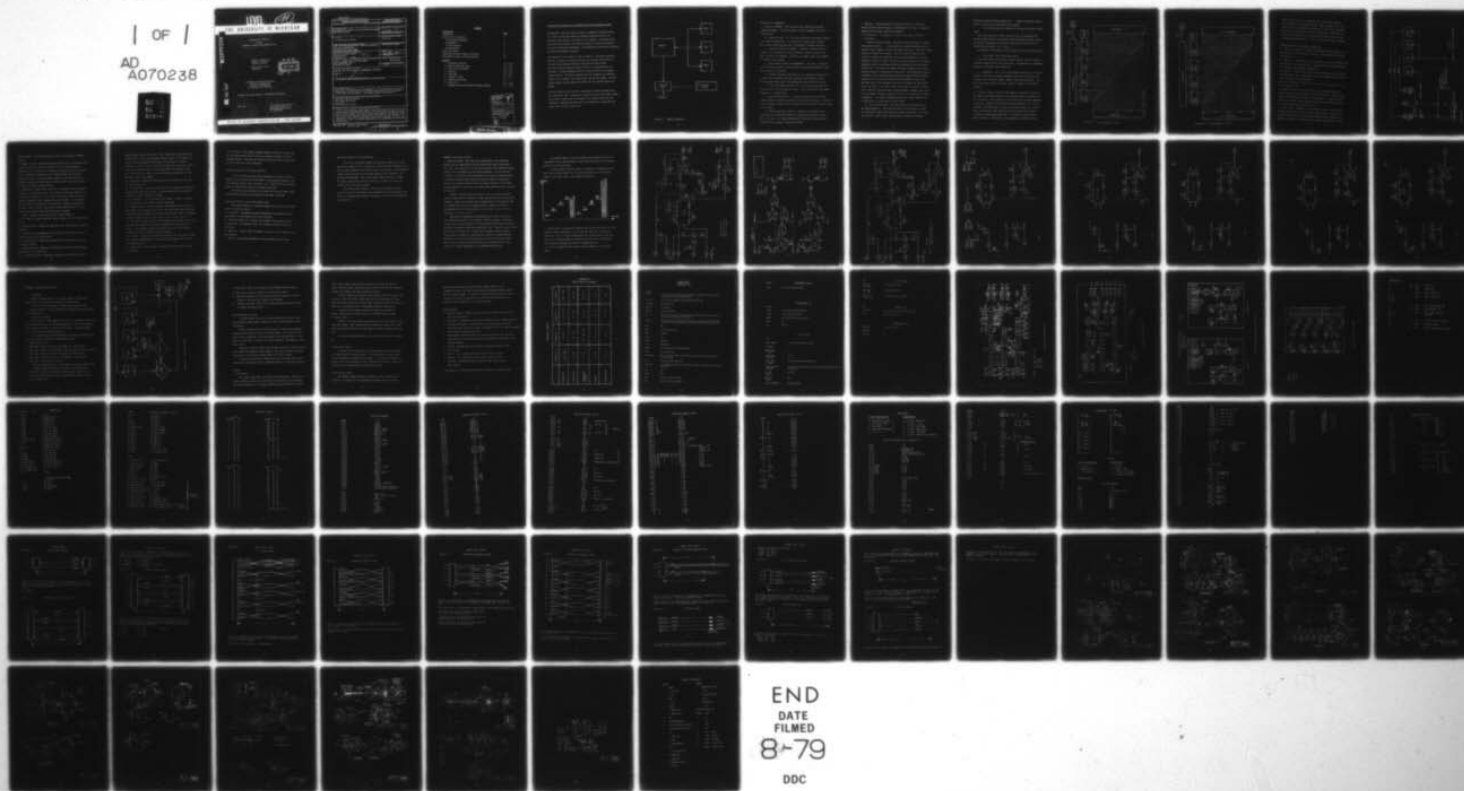

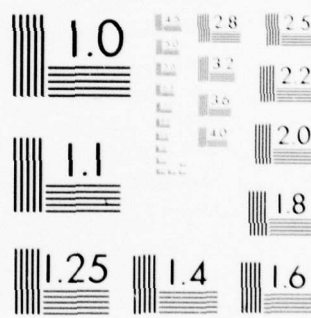

MICROCOPY RESOLUTION TEST CHART  
NATIONAL BUREAU OF STANDARDS-1963-A

**LEVEL**

*AD*


# THE UNIVERSITY OF MICHIGAN

AD A070238

Electronics & Control  
for the  
Shipboard Pressure Measurement System

Vernon A. Phelps, P.E.  
Research Scientist  
Project Director

Robert Keller, Ph.D.  
Professor

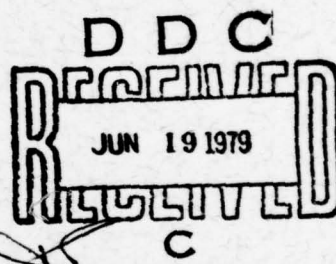

Department of Naval Architecture  
and Marine Engineering  
College of Engineering  
The University of Michigan

APPROVED FOR PUBLIC RELEASE: DISTRIBUTION UNLIMITED

MAY 1979

This research was carried  
out under an Office of  
Naval Research Contract  
No. NR-062-572

DDC FILE COPY

OFFICE OF RESEARCH ADMINISTRATION • ANN ARBOR

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

REPORT DOCUMENTATION PAGE		READ INSTRUCTIONS BEFORE COMPLETING FORM
1. REPORT NUMBER	2. GOVT ACCESSION NO.	3. RECIPIENT'S CATALOG NUMBER
4. TITLE (and Subtitle) ELECTRONICS AND CONTROL FOR THE SHIPBOARD PRESSURE MEASUREMENT SYSTEM.		5. TYPE OF REPORT & PERIOD COVERED 9. FINAL rept.
7. AUTHOR(s) V. Phelps and R. Keller		6. PERFORMING ORG. REPORT NUMBER
9. PERFORMING ORGANIZATION NAME AND ADDRESS DEPT. OF NAVAL ARCHITECTURE & MARINE ENGINEERING COLLEGE OF ENGINEERING THE UNIVERSITY OF MICHIGAN ANN ARBOR, MICHIGAN, 48109		8. CONTRACT OR GRANT NUMBER(s) NR-062-572
11. CONTROLLING OFFICE NAME AND ADDRESS NAVAL SEA SYSTEMS COMMAND (NAVSEA 0331G) WASHINGTON, D. C. 20362		10. PROGRAM ELEMENT, PROJECT, TASK AREA & WORK UNIT NUMBERS
14. MONITORING AGENCY NAME & ADDRESS (if different from Controlling Office) DAVID W. TAYLOR NAVAL SHIP R&D CENTER SHIP PERFORMANCE DEPT. BETHESDA, MD 20084		12. REPORT DATE 11 MAY 1979
		13. NUMBER OF PAGES 71
		15. SECURITY CLASS. (of this report) UNCLASSIFIED
		15a. DECLASSIFICATION/DOWNGRADING SCHEDULE
16. DISTRIBUTION STATEMENT (of this Report) APPROVED FOR PUBLIC RELEASE: DISTRIBUTION UNLIMITED 10 Vernon A. Phelps 1 Robert Keller		
17. DISTRIBUTION STATEMENT (of the abstract entered in Block 20, if different from Report)		
18. SUPPLEMENTARY NOTES This report was prepared by the Department of Naval Architecture and Marine Engineering of the University of Michigan under contract with the David W. Taylor Naval Ship R&D Center. The contract number was NR-062-572.		
19. KEY WORDS (Continue on reverse side if necessary and identify by block number) Scanivalve Pressure System Full Scale Wake Survey Pitot Tube Electronics and Control		
20. ABSTRACT (Continue on reverse side if necessary and identify by block number) This report presents a description of the electronics and control for the shipboard pressure measurement system. The total system includes the underwater pressure sensors, the lines to bring this pressure information aboard the ship to the electronics and controls, and finally to the computer. This report deals only with the electronics and controls necessary to select and condition the lines for pressure measurement, the transducers and associated electronics.		

DD FORM 1 JAN 73 1473

EDITION OF 1 NOV 65 IS OBSOLETE  
S/N 0102-LF-014-6601

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

1

401 188

LB



## CONTENTS

<u>Description</u>	<u>Page</u>
Introduction	1
Description of Components	
(1) Scanivalve Equipment	3
(2) Manifold	4
(3) Miscellaneous	4
(4) Electronics	4
Scanivalve System	5
Operational Details of Master Controller	8
Operational Details of Slave Controller	12
<u>Appendix</u>	
A - Electronic Circuits	A-1 - A-10
B - Master Controller Logic	B-1 - B-5
C - Parts List & Pictorals	C-1 - C-8
D - Main Box	D-1 - D-9
E - Slave Box	E-1 - E-2
F - Connector 5 Hole	F-1 - F-3
G - Terminal Box Wiring	G-1
H - Cable List	H-1 - H-10
I - Boundary Layer and Wake Rake Assembly Drawings	I-1 - I-10

Accession For	
NTIS GRA&I	<input checked="checked" type="checkbox"/>
DDC TAB	<input type="checkbox"/>
Unannounced	<input type="checkbox"/>
Justification	
By _____	
Distribution/ _____	
Availability Codes	
Dist	Avail and/or special
A	

## Electronics and Control for the Shipboard Pressure Measurement System

Introduction: The total system includes the underwater pressure sensors, the lines to bring this pressure information aboard the ship to the electronics and controls, and finally to the computer. This report deals only with the electronics and controls necessary to select and condition the lines for pressure measurement, the transducers and associated electronics, and the system-computer interface.

The schematic of this system is shown in Figure 1. The master controller handles its pressure scanning system and also furnishes the control for the other three pressure scanning systems, called slaved systems.

Thus four pressure scanning systems, which act in synchronization, are available. Pressure readings from all 4 systems are fed to the computer from the master. The master controller box also furnishes two additional signals to the computer; the channel number and the read signal. Both the channel number and read signals are binary; but the pressure signals are analog.

The final portion of the system is the dynamic pressure measurement from the 5 hole pitot tube. Transducers, located in the pitot tube head, produce the millivolt signals which are brought to the surface, where they are conditioned, amplified and then sent to the terminal box, along with the signals from the master controller.

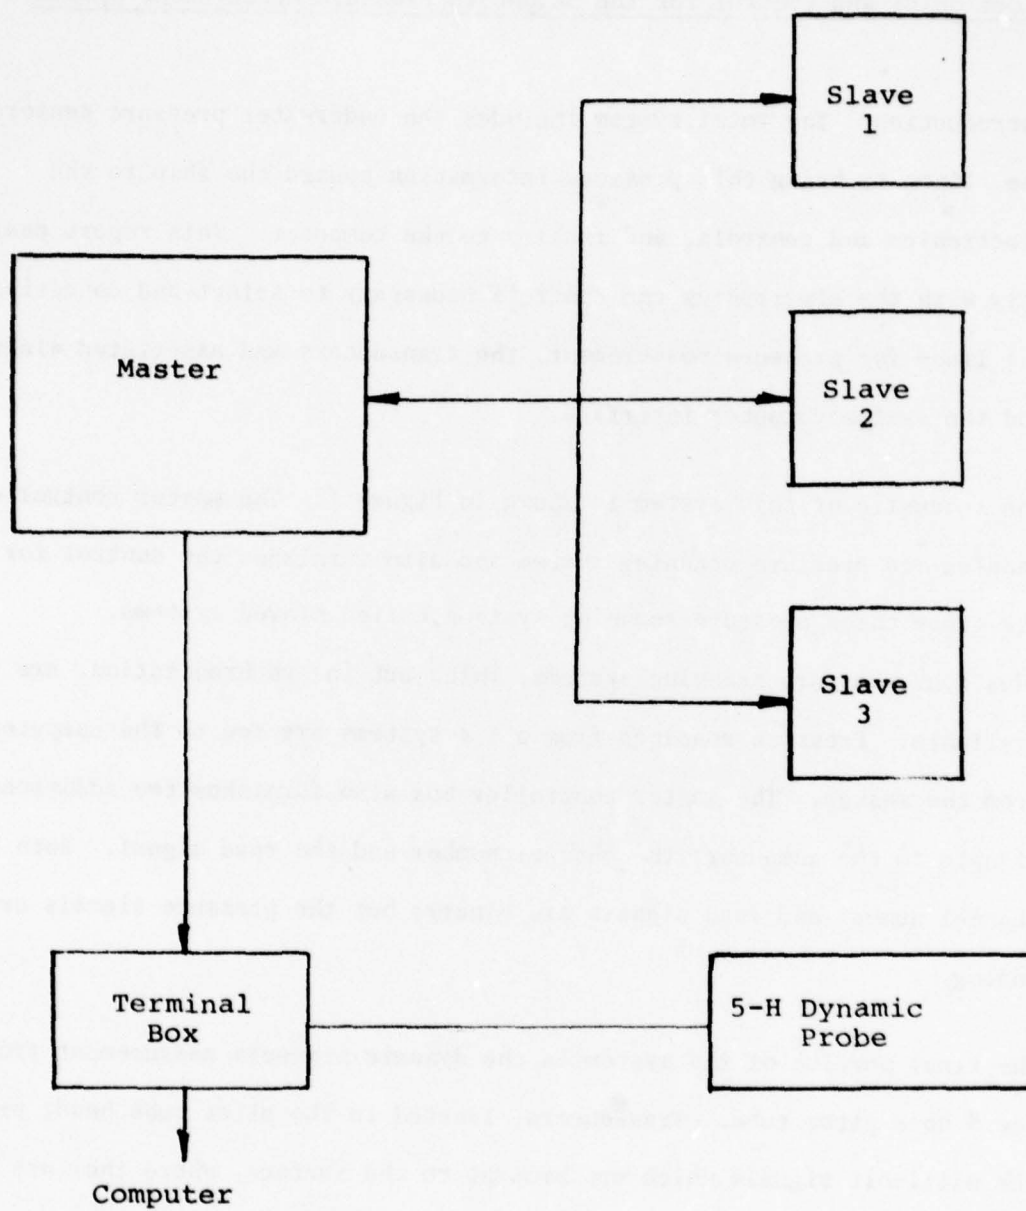


Figure 1. System Schematic

## Description of Components.

1. Scanivalve Equipment. The Scanivalve Corp. manufactures pressure scanning equipment. A brief description of their equipment used in this system follows:

A. Scanivalve (48J4 - 1): This unit allows up to 48 pressure channels to be sampled sequentially. It is driven by a geared rotary solenoid, has a channel sensor and provisions for mounting a pressure transducer.

B. Scanivalve Controller (CTRL10P): Furnishes the power actuation signal to the solenoid drive of the Scanivalve. Controls include step, home, and pulse rate commands. The ability to handle remote step commands is utilized in this system.

C. Binary Channel Counter (CTR2/OETM-BINY): This unit is connected to the scanivalve and has a digital display indicating the channel at which the scanivalve is positioned.

D. Pressure Transducer (Druck PDCR 22  $\pm$  15 available from Scanivalve): A conventional diaphragm strain gage transducer whose features include pressurizing the back side of the diaphragm and over-pressure to 60 psig.

E. Fluid Switch Wafers (W1260/6P-IT): Each fluid switch wafer acts like an on-off valve for each of 6 lines. Four of these wafers are mounted together on a solenoid drive.

F. Solenoid Drive (WS5-12): A rotary solenoid drives the actuator shaft to advance the wafers one "notch" for each actuation pulse. Electrical switches mounted integrally with the shaft allow an electrical "on-off" signal to be obtained.

G. Solenoid Controllers (CTRL10): Similar to the controller unit which drives the Scanivalve solenoid; but without the timed pulse option.

Note: This unit is no longer manufactured by Scanivalve, and the CTRL10P is now the only controller available from them.



2. Manifold: A special manifold, constructed from a 2 in. pipe and various fittings delivers supply air individually to 24 lines. A pressure gage and extra fittings complete the assembly.

3. Miscellaneous: Air regulator, 30 psig relief valve, air filter.

4. Electronics

A. Master controller boards. The master controller directly controls one Scanivalve and two fluid switch water (bleed) assemblies and also supplies control signals to each of the three slave units. The master control circuit is arranged on two boards. The first board contains the logic circuits to advance the Scanivalve, drive the read flag high or low and produce the signals to advance the bleed solenoids assembly solenoid drives. Adjustable timers on this board control the duration of the various phases of each cycle. The board also contains the logic required by the various options available in sequencing the Scanivalves. The second board contains the analog circuitry for processing the pressure signal from the transducer located in the Scanivalve and also has an analog channel indicator for the strip chart. Also included are two sets of counters for determining "Cmax" and "Purge". All digital inputs and outputs are optically coupled, which eliminates ground and supply voltage problems. Complete logic rules, circuit diagrams, pictorals, and parts lists for all electronics are shown in Appendix A. The various sequencing options and control features will be discussed in a latter section of this report.

B. Slave Control Boards. Each slave controls one Scanivalve and two bleed assemblies. Each slave unit has its own electronics, which are considerably simpler than those of the master controller. Each slave unit receives control signals from the master controller (including



Scanivalve advance and bleed signals) and advances the bleed solenoid based on the position of each bleed valve assembly.

The slave Scanivalve is advanced by the master Scanivalve advance signal.

Each slave board also contains analog circuitry for processing the pressure signal from its own Scanivalve pressure transducer before sending this pressure information to the master controller for transfer to the terminal box and finally to the computer.

See Appendix A for complete circuit details on the slave control boards.

#### C. 5-Hole Dynamic Pitot Tube Pressure Board

This board accepts the millivolt pressure signals from the 5 pressure transducers mounted in the 5-hole pitot tube. The amplified and conditioned signals are then sent to the terminal box.

D. Terminal Box. This is the system/computer interface, to be located adjacent to the digital computer equipment, which takes the signals from the master box (4 pressure signals, channel signals and read flag) and the 5-hole dynamics probe (5 pressure signals) available to the digital computer.

II. Scanivalve System. There are four identical Scanivalve systems; one is driven by the master controller; the remaining three are controlled by the slave boards. Each Scanivalve system contains the following components: a Scanivalve complete with drive and pressure transducer, two bleed assemblies each consisting of 4 fluid switch wagers mounted on a solenoid drive; two manifolds, each supplying one of the bleed valve assemblies, a regulator, piping, gages and filter. This system is shown schematically in Figure 2. Functionally, this equipment is arranged to allow

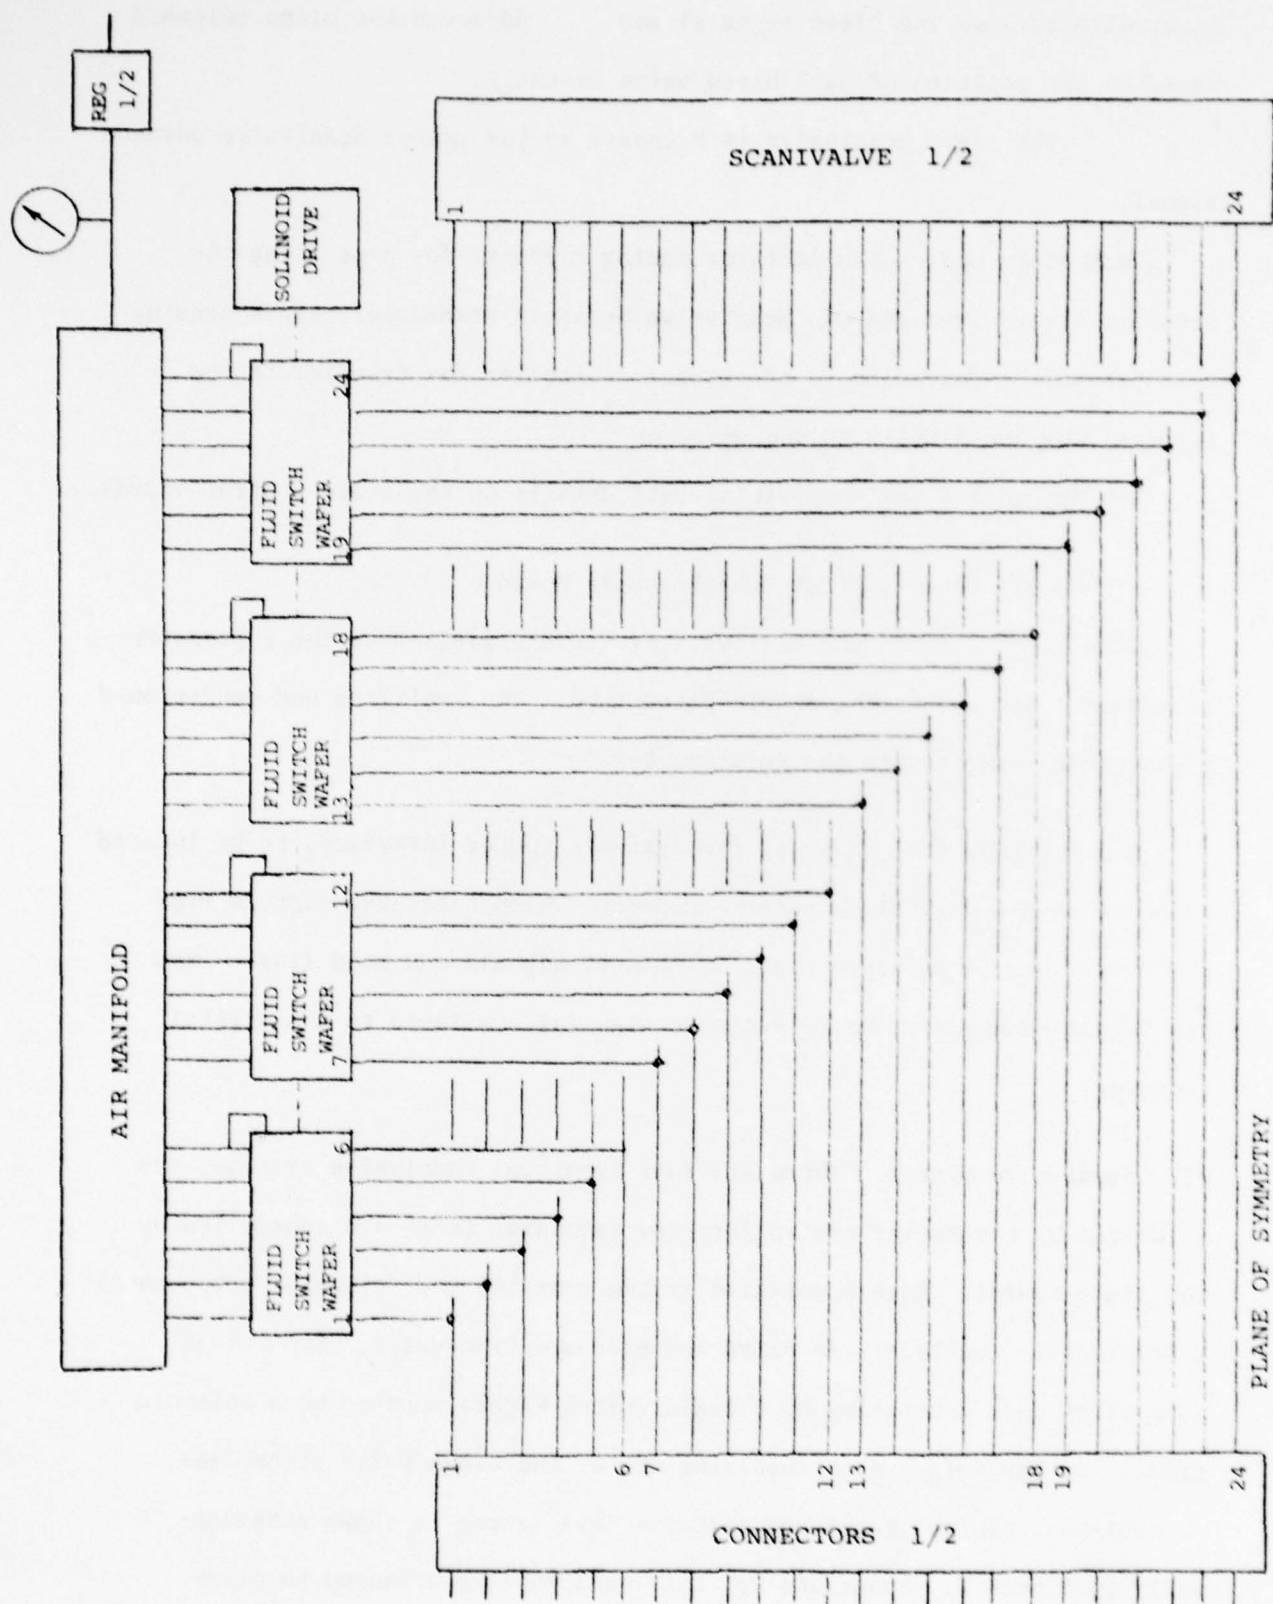


Figure 2. 1/2 of Pneumatic Circuit

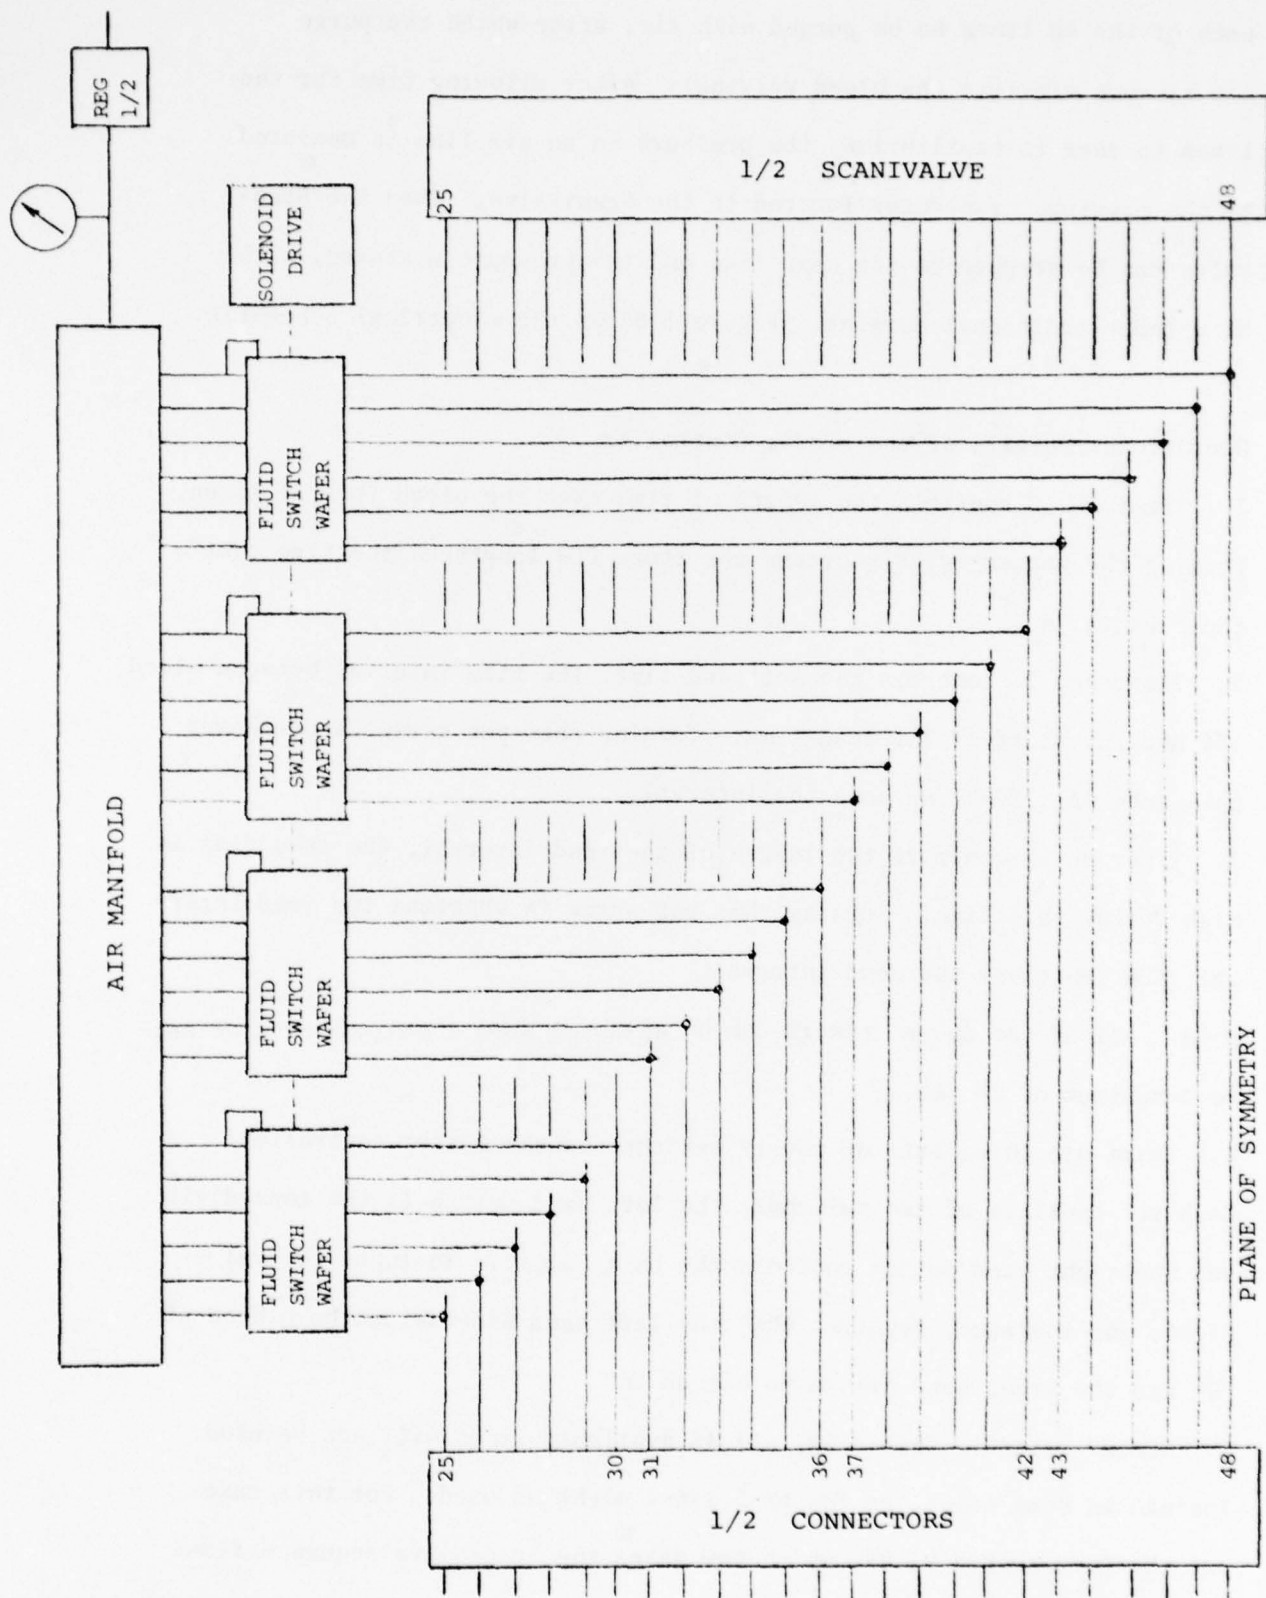


Figure 2b. 1/2 of Pneumatic Circuit

each of the 48 lines to be purged with air, after which the purge air is shut off (via the bleed valving). After allowing time for the lines to come to equilibrium, the pressure in an air line is measured by the pressure transducer located in the Scanivalve. Then the Scanivalve can be stepped to the next line and the pressure measured, with or without additional purging. Figure 3 Shows the electrical schematic.

#### Operational Details of the Master Controller


1. Timer no. 2 controls the length of time that the bleed (purge) is on, turning the pot screw CW shortens the time, CCW lengthens the time that the bleed is on.
2. Timer no. 3 controls the settling time; the time interval between bleed off and the start of the read time. Turning this pot screw CW decreases this interval; CCW lengthens the interval.
3. Timer no. 4 controls the length of the read interval, the read flag is high during this time. Turning this pot screw CW shortens the read interval, CCW lengthens the read interval.

Note: All of the above timers can be adjusted from a minimum of 0.05 sec to a maximum of 10 sec.

4. There are three sets of rotary switches on the master controller. Each set consists of two switches, the left hand switch is the tens digit and the right hand switch controls the units digit. To input the value of 26, for instance, requires that the left hand side switch be placed at "2" and the right hand switch be set at "6".

5. "Cmax" switch. Generally, all 48 available lines will not be used. Instead in some cases, as few as 5 lines might be used. For this case set the Cmax switch to 05, which now makes the Scanivalve sequence from channels 1 through 5 and allows a rapid indexing from channels 6 to 48,



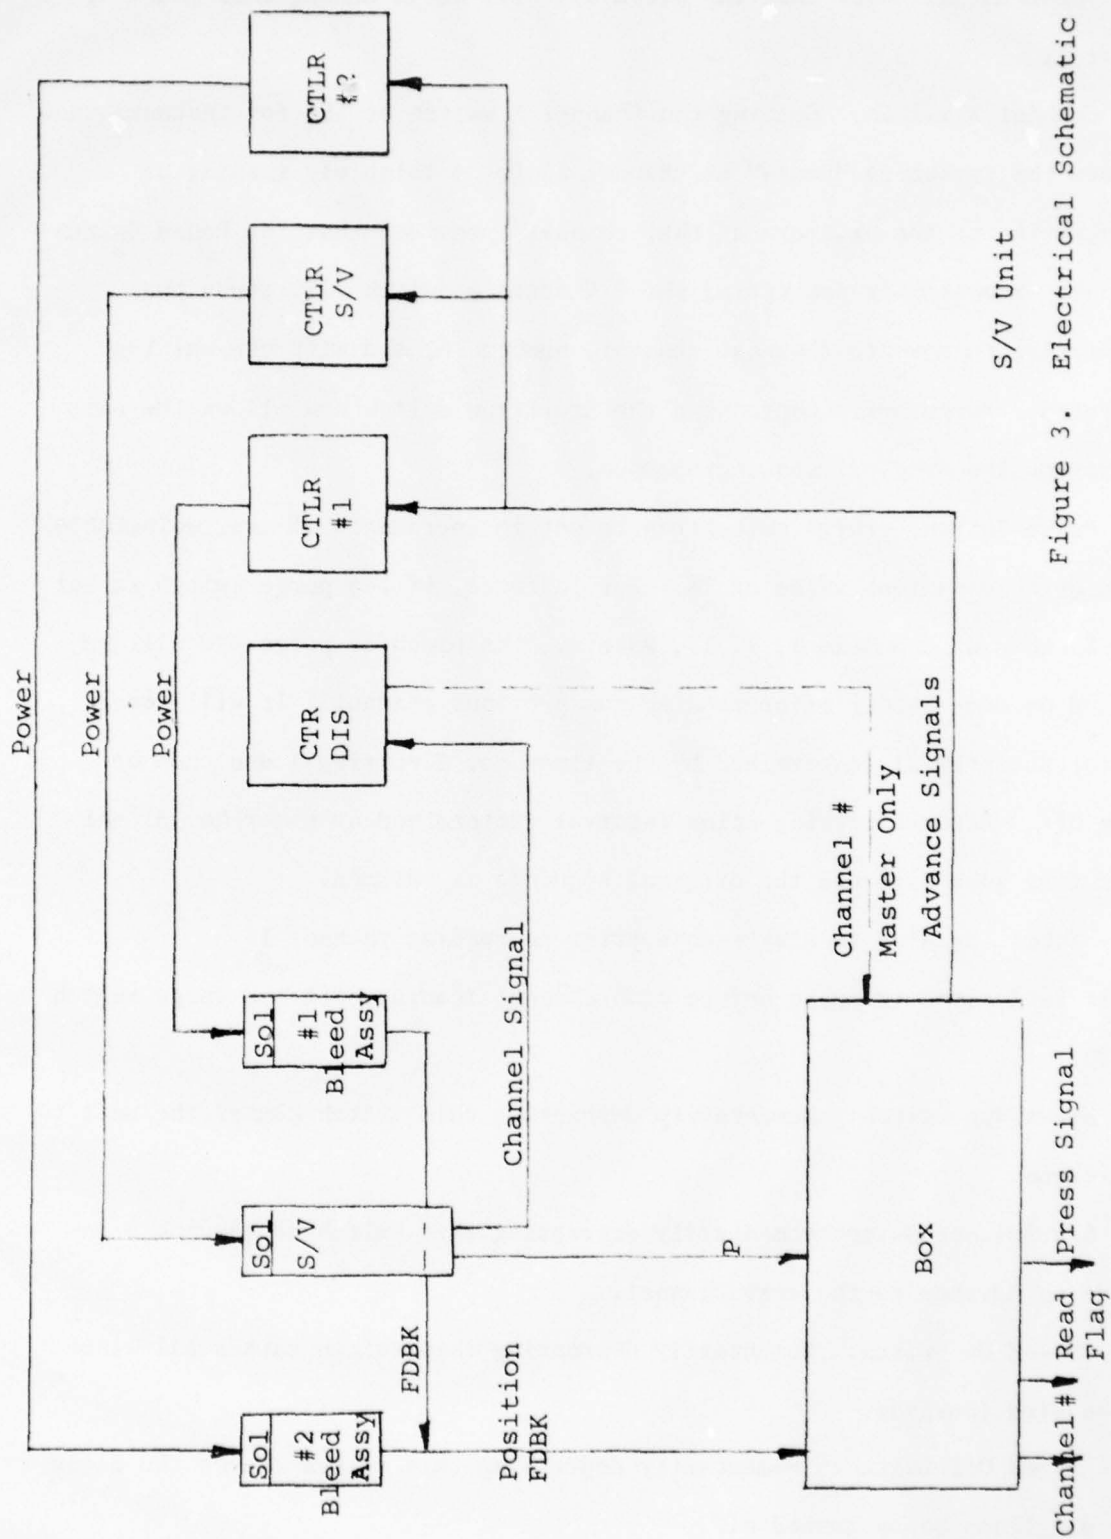

S/V Unit

Figure 3. Electrical Schematic



without reading. Note that the bleed air will be on during this indexing interval.

6. Channel X switch. Setting the Channel X switch at 15, for instance, now causes the system to "Pause" at channel 15 for a leisurely reading or examination of the pressure of that channel (provided that the Pause Switch is on). Momentarily depressing the S/V Advance switch will cause the Scanivalve to move to the next channel, number 16, and with the waiting repeated. Momentarily depressing the Start/run switch now allows the unit to resume the original sequencing mode.

7. Purge Switch. Purge switch can be set in increments of two, selectable from 00 to a maximum value of 28. For instance, if the purge switch is set at 08, then on channels 1, 9, 17, 25 etc., the bleed or purge air will be turned on immediately after reading the previous channel. It will remain on for an interval (determined by the timer No. 2 setting ) and then be shut off. After a setting time interval (determined by timer No. 3) the read flag goes high and the original sequence is resumed.

Note: purging is always done prior to reading channel 1.

If it is desired to purge before each channel reading, set the Purge switch to 00.

8. Start/Run Switch: Momentarily depressing this switch causes the unit to start/run.

9. S/V Advance Switch: Momentarily depressing this switch causes the Scanvalve to advance to the next channel.

10. Bleed On Switch: Momentarily depressing this switch causes all lines to be bled (purged).

11. Bleed Off Switch: Momentarily depressing this switch causes the bleed for all lines to be turned off.

12. Counter Reset Switch: Momentarily depressing this switch causes the

Cmax and purge counters to be reset. Note: Resetting the Cmax and purge counters does not reset the Scanivalve channel counter. This counter can only be reset by pushing the Home button on the Scanivalve solenoid controller. Failure to reset all counters together will cause the counters to be out of synchronization. This will not affect the operation of the unit except that Cmax, Channel X, and the Continuous Run options will not operate at the correct channels.

13. Stop Switch: Momentarily depressing this switch stops the unit after the read flag goes low.

14. Continuous Run: In the off position, unit will sequence to channel 48 (displayed as channel 00) and stop. In the on position, unit continues to sequence to channel 1 when 48 is reached.

15. Pause Switch: In the on position, the "Channel X" option is enabled. In the off position, the channel X option is disabled.

16. Suppress Switch: In the on position, the suppress option is enabled. The suppress option suppresses the zero of the strip chart recorder pressure signal allowing an expanded scale reading of the voltage. Note: the amount of voltage suppression is determined by the setting of the suppress pot.

17. Cal. Switch: Depressing this switch unbalances the bridge of the strain gage pressure transducer by an amount determined by the calibration pot setting. This unbalance signal will appear at the strip chart recorder terminals and also the computer pressure terminals.

18. Gain pots: The gain of the pressure signal to the strip chart recorder can be adjusted independently of the gain for the computer signal, using the appropriate pots.

19. Balance pot: This pot allows the signal to the strip chart recorder to be shifted.

20. Offset pot: The computer pressure signal is offset by 5 volts; that is, the signal varies from -5 volts at no pressure to nearly +5 volts at maximum pressure. Note that the offset pot allows the zero pressure level to be set below zero volts if desired.

#### Operational Details of the Slave Controller

All of the analog control features present on the master controller board are also present on the slave board: Cal and Suppress switches, and Cal, Suppress, Balance, Gain, and Offset pots. Their functions and adjustments are identical with those of the Master Controller.

No digital control features are available on the slave boards, since all sequencing functions are controlled by the master controller.

#### Operational Details of the 5-hole dynamic probe.

This board consists of 5 identical analog circuits; only one of which will be described in detail.

1. Cal switch: Depressing this switch unbalances the transducer bridge a fixed amount (as determined by the cal pot setting).
2. Transducer Balance pot: Adjusts the transducer output signal to null for zero input. Not generally used, since original adjustment should be sufficient.
3. Offset pot. Adjusts offset of signal; to get the -5 volts signal at the zero pressure.
4. Gain pot. Allows gain adjustment to get the desired voltage swing.

### Operational Details of the Terminal Box

Since all of the digital signals are optically coupled, it is only necessary to supply a + D.C. voltage; say 5 volts to the V+ connection and to use the common terminal for the ground side of this voltage. Then the binary channel signals and the read flag signal appear at their terminals. NO RESISTORS ARE NECESSARY. When these digital signals are "on" or "high", the output voltage will be nearly 0 volts d.c. In the "off" state, the voltages will be the supply voltage.

The analog pressure signals-- from the four Scanivalve pressure transducers and the five dynamic probe transducers are all referenced to the ground of the single power supply of the system. This is the "G" terminal on the terminal box.

## APPENDIX A Electronic Circuits

1. Design Philosophy: CMOS logic was chosen because of its high noise immunity and its compatibility with the analog power supply requirements ( $\pm 12$  VDC). The ubiquitous 555 timer was selected as the variable monostable vibrator from a reliability and glitch-free viewpoint. For the counters, a Johnston or ring counter was used because of its ease of interfacing with conventional multiple-throw single-pole switches. Optical couplers were used for all inputs and outputs (with the obvious exception of the analog pressure signals) to insure that the various boxes and boards were de-coupled electrically.


Position feedback signals were used for all of the bleed solenoid drives to insure that all remained "in step" with the bleed on and bleed off commands. Because of the higher quality construction of the Scanivalve and its solenoid drive, no direct feedback was used. However, the proper synchronization of the four Scanivalves can be checked visually using the displays of the binary counters.

High quality instrumentation amplifiers (AD 521) were used as the first stage amplification for the pressure transducer signals. Selecting a nominal gain for these amplifiers of 100, additional amplification needed was supplied by inexpensive operational amplifiers (741). Separate op amp circuits were used for the strip chart recorder and the computer pressure signals. These op amps, in addition to supplying gain, protect the instrumentation amplifiers in the event of accidental short circuits of the output signal. Balance, gain, offset, and calibration pots on the analog circuits allow detailed and careful adjustments of the signals being processed.




The suppress feature on the strip chart circuit allows the zero to be "suppressed" and the gain increased so that better resolution can be achieved with the strip chart recorder.



An analog channel indicator signal is provided, by weighting the outputs from the units counter into an op amp; and putting a 2 hz oscillator signal on the 0 and 5 count. The channel id pattern is

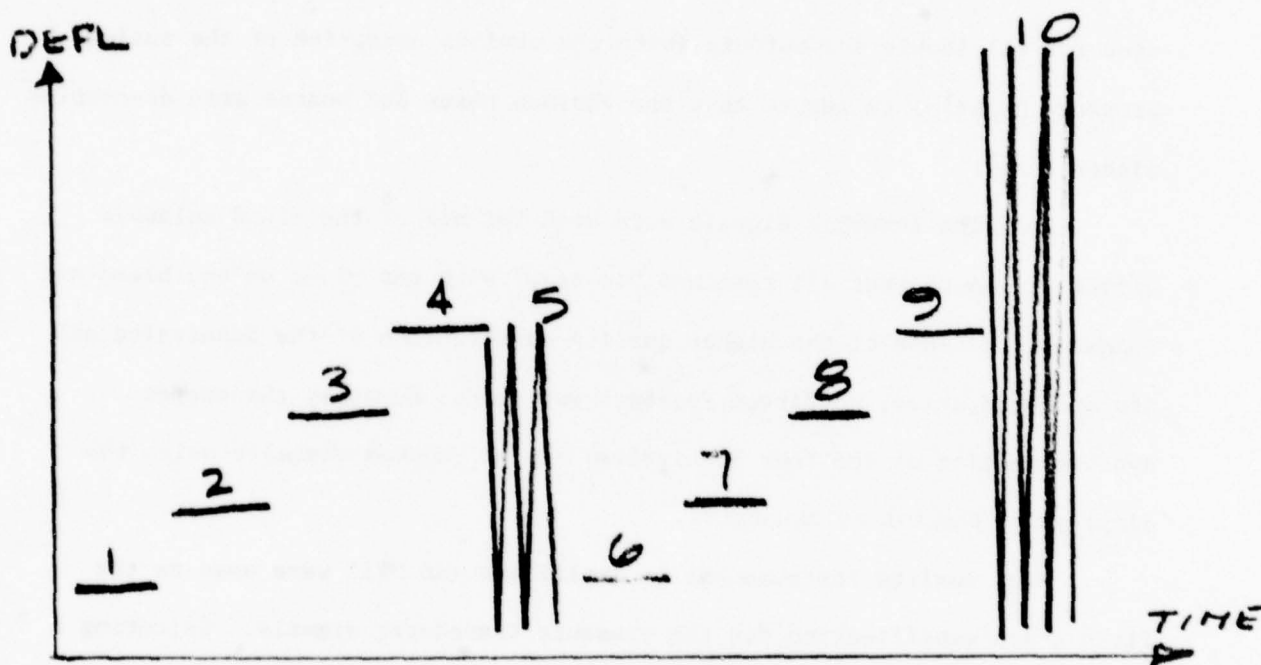



2. Construction. Circuits were constructed on Vector boards with a 0.1 hole spacing. Master boards were 4-1/2 x 9 while the slave and 5-hole boards were 4-1/2 x 6 in. A Vector wiring pencil with 36 page wire was used; this wire has an insulation which is vaporized by the heat from the soldering iron; thereby eliminating the need for stripping the wire.
3. Circuits, diagram, pictoral, parts lists are shown on the following pages.

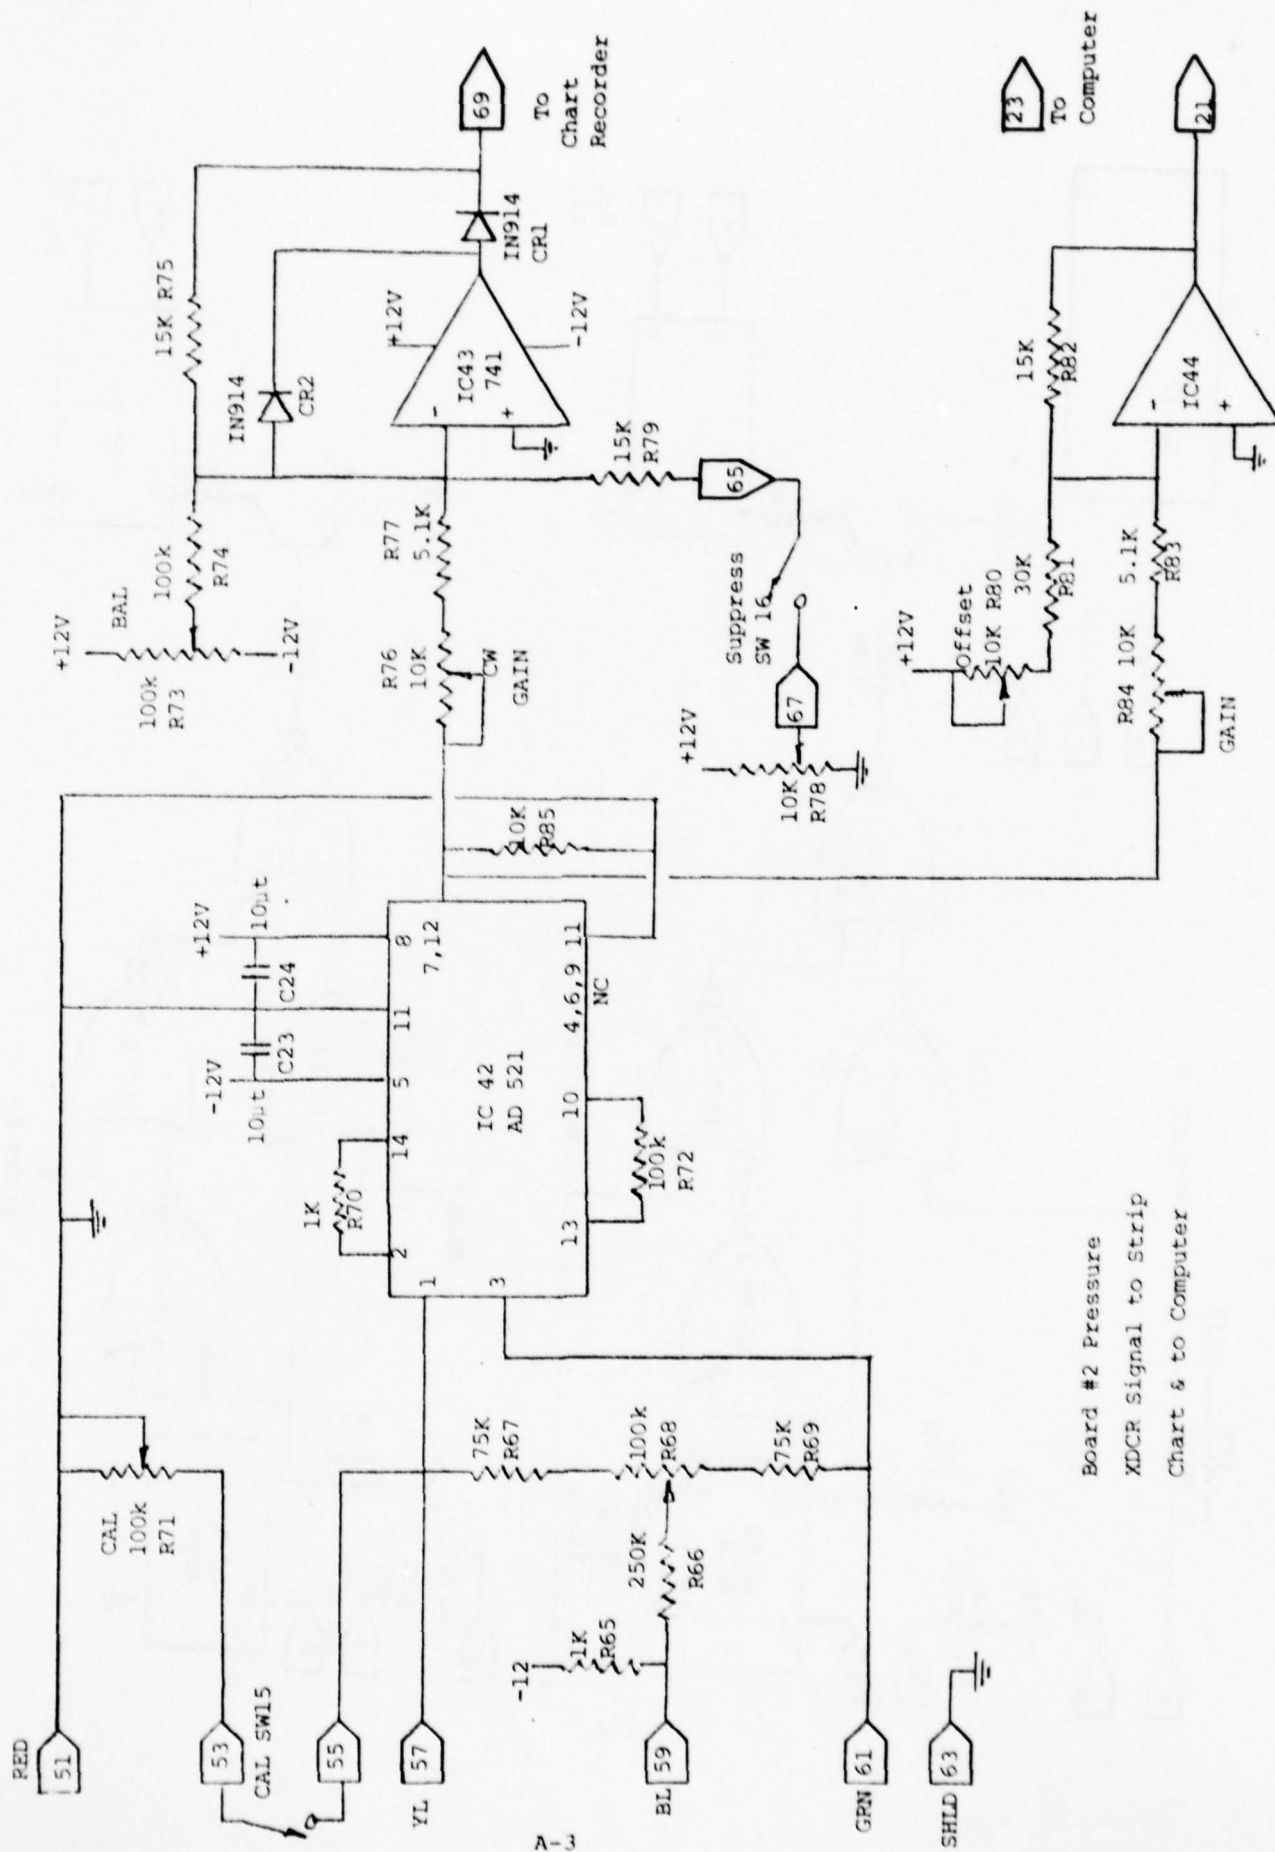

Board #2 Pressure  
XDCR Signal to Strip  
Chart & to Computer

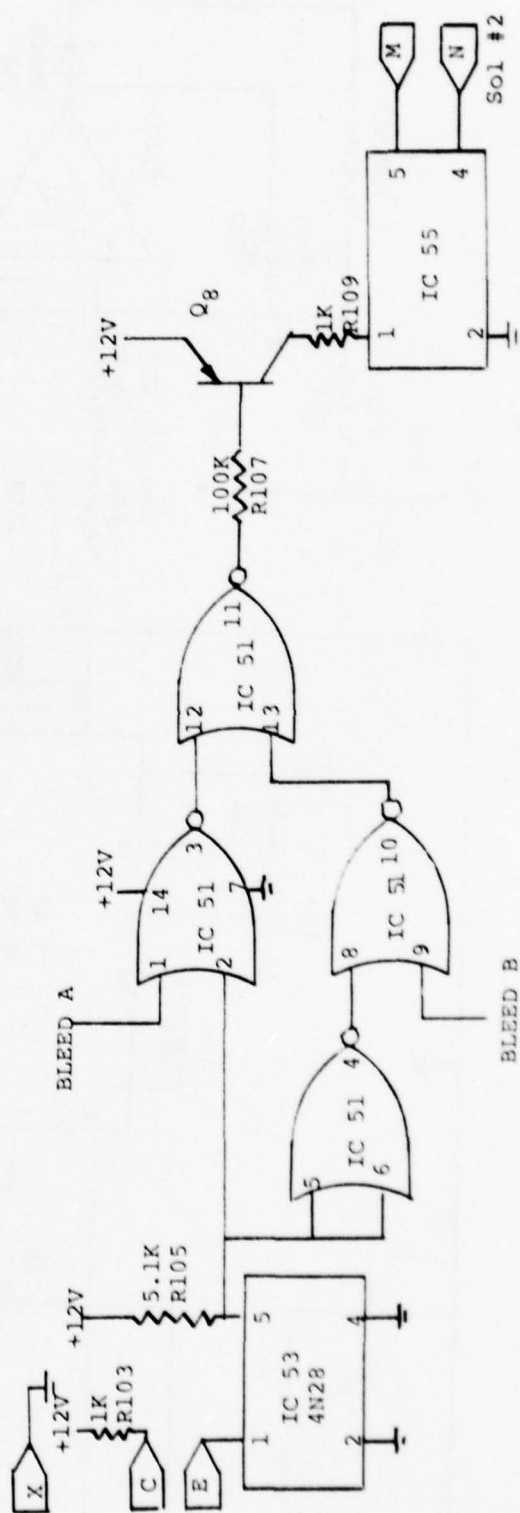
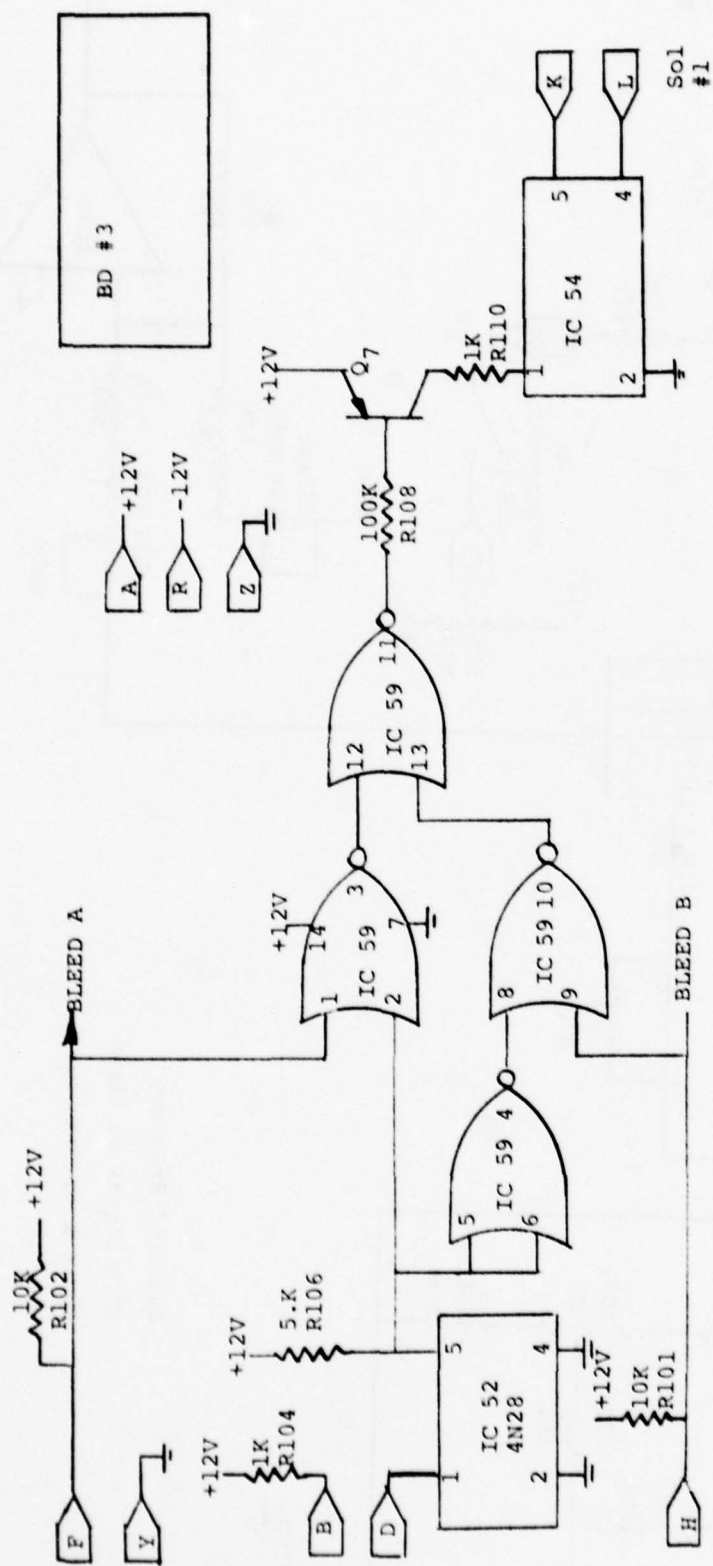



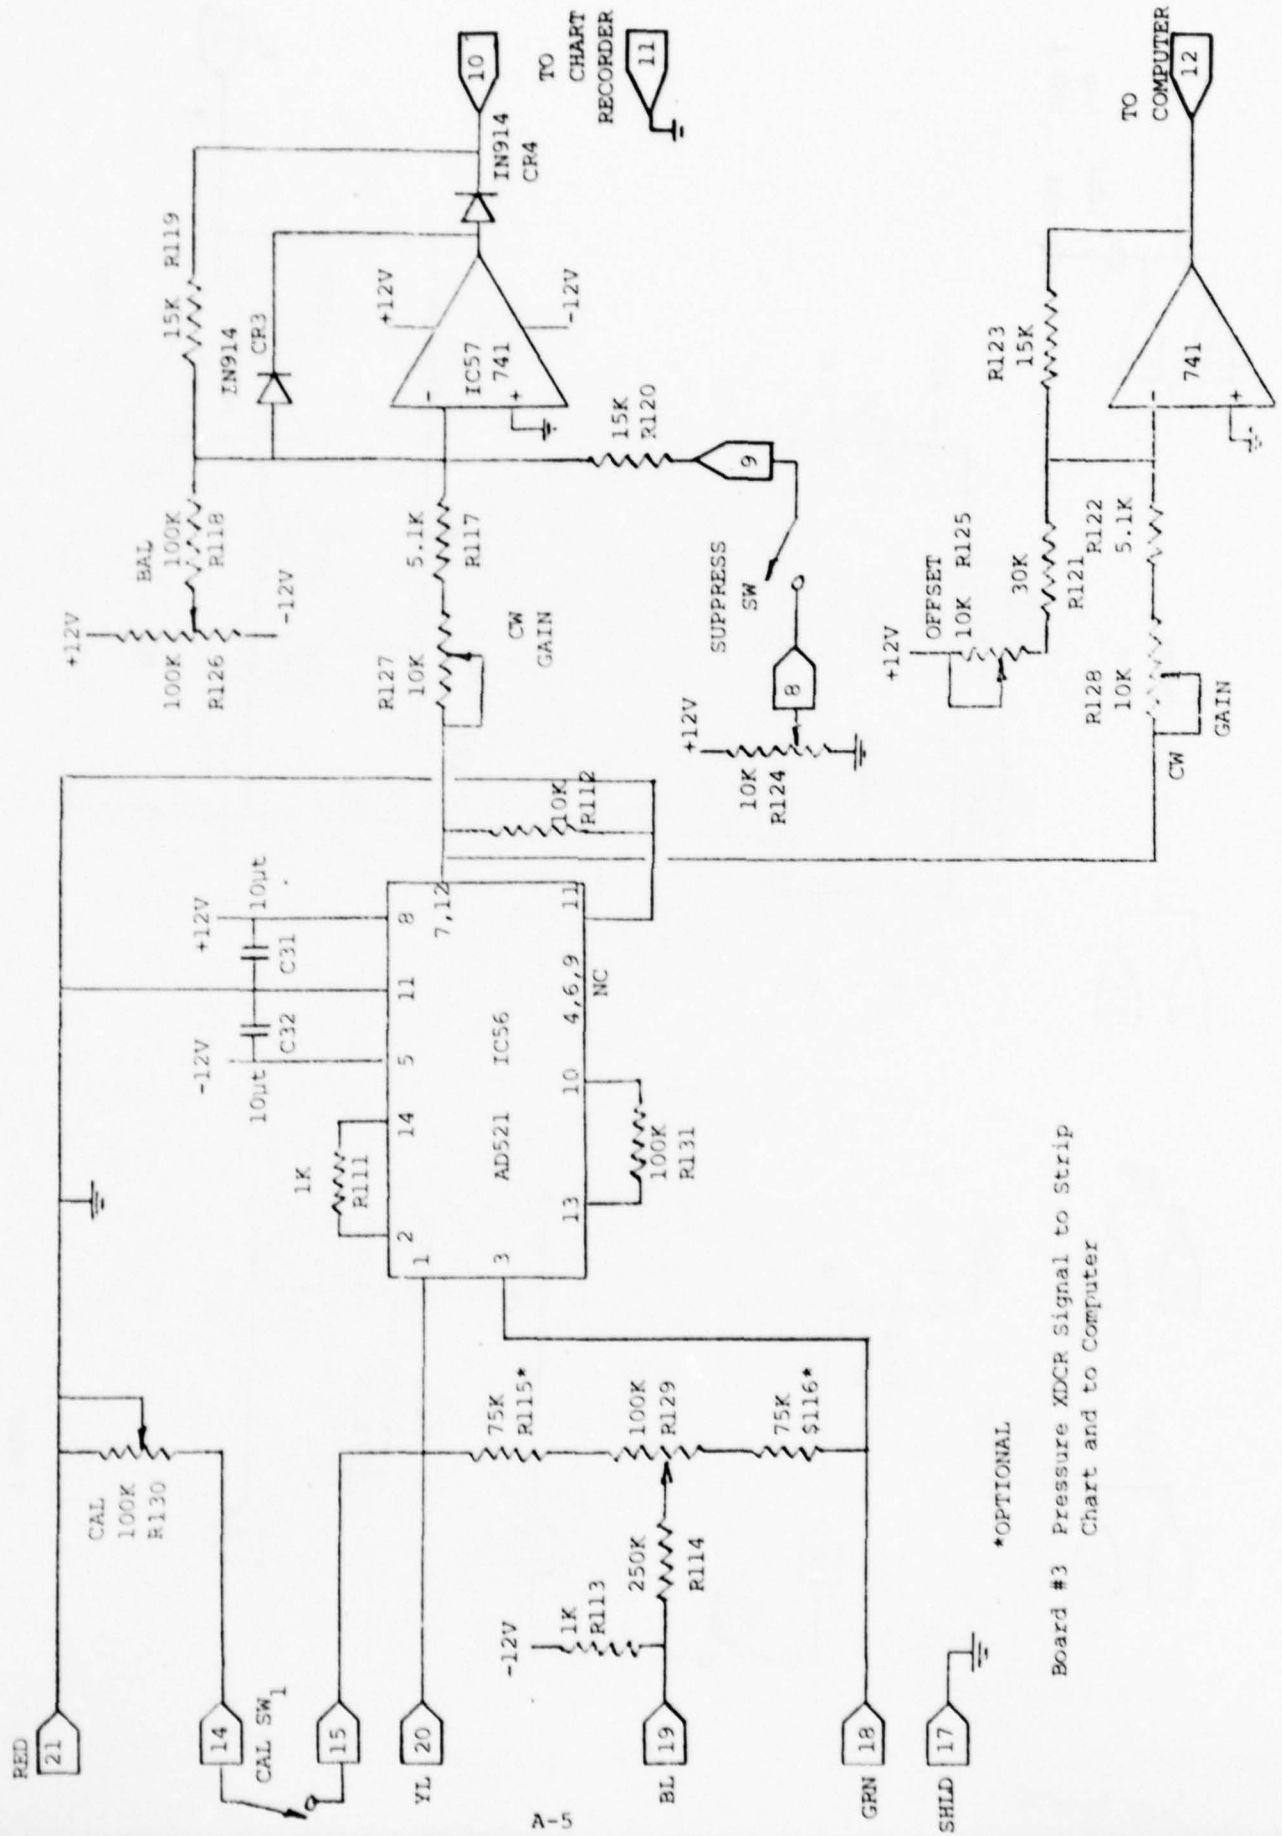


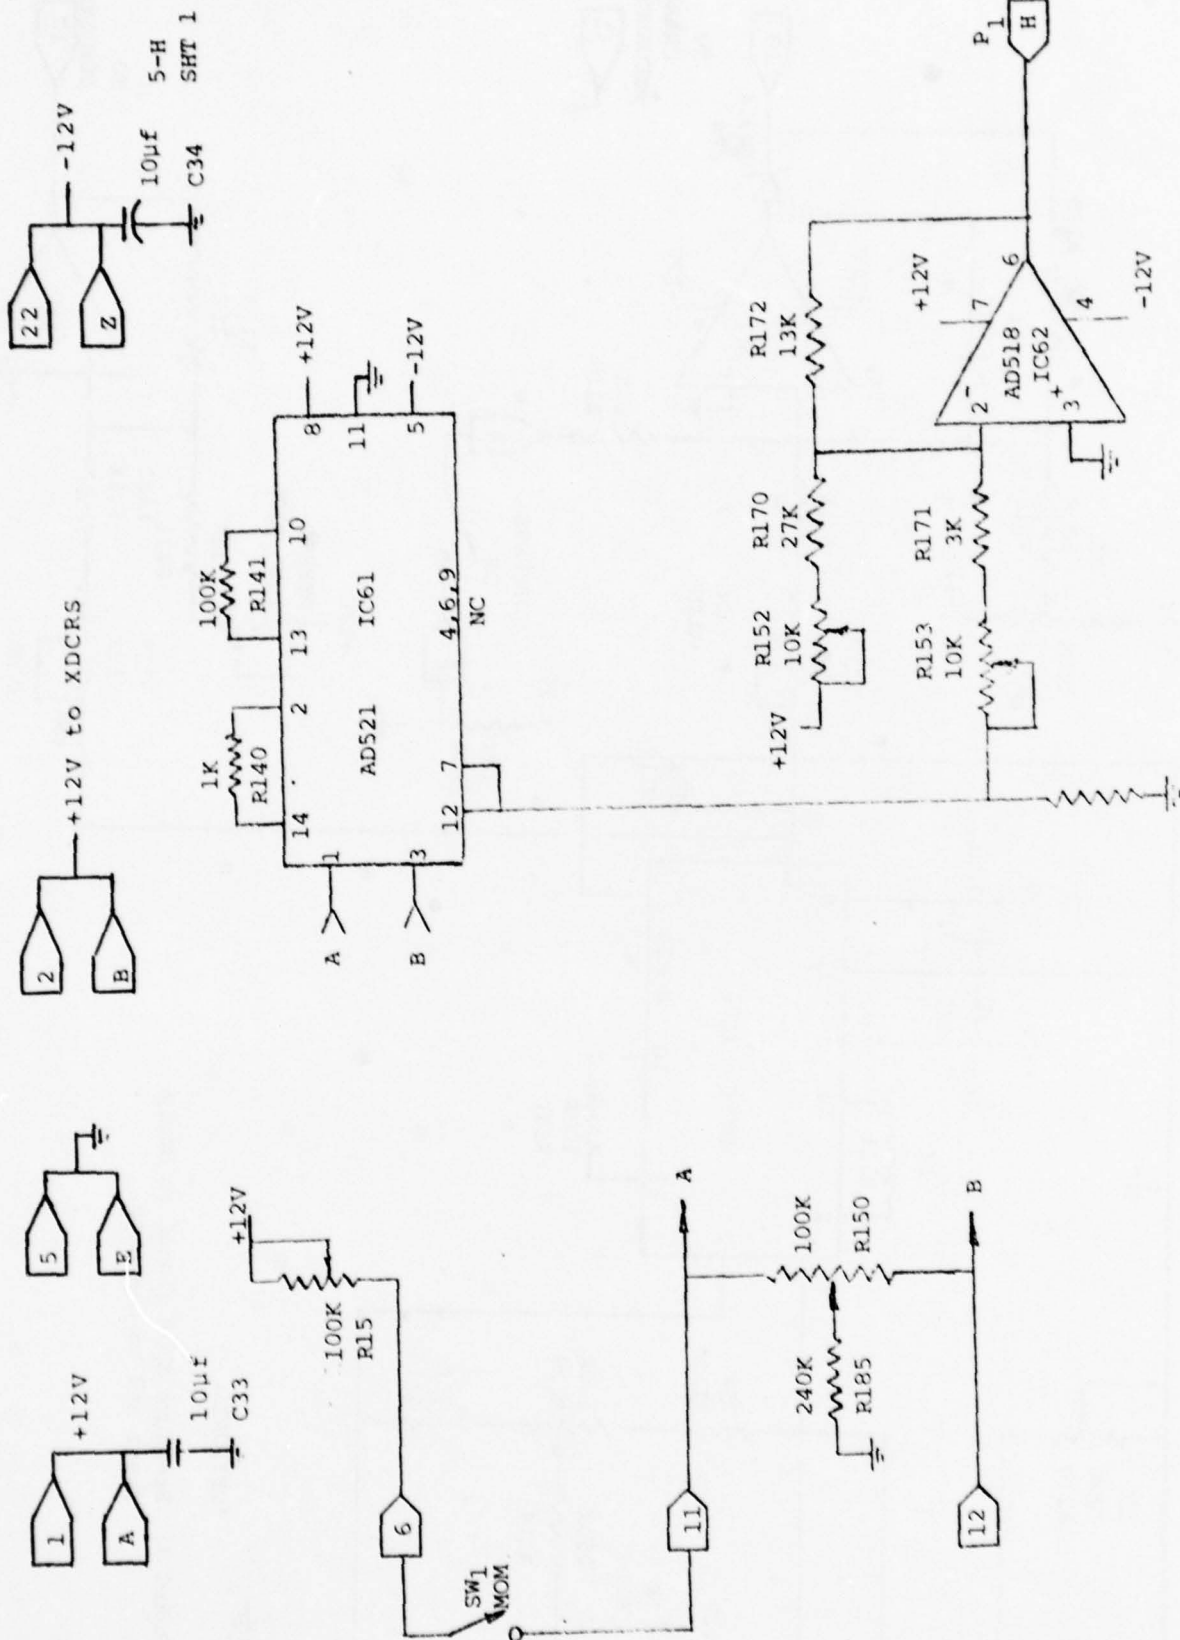





5H  
SHT 2

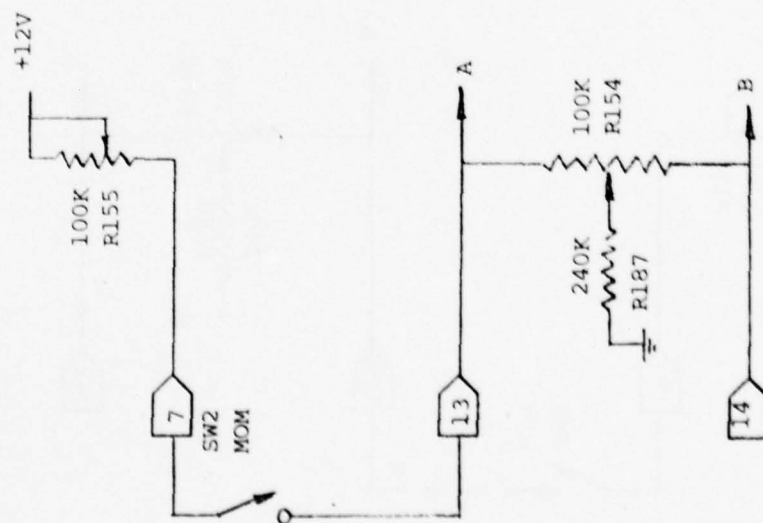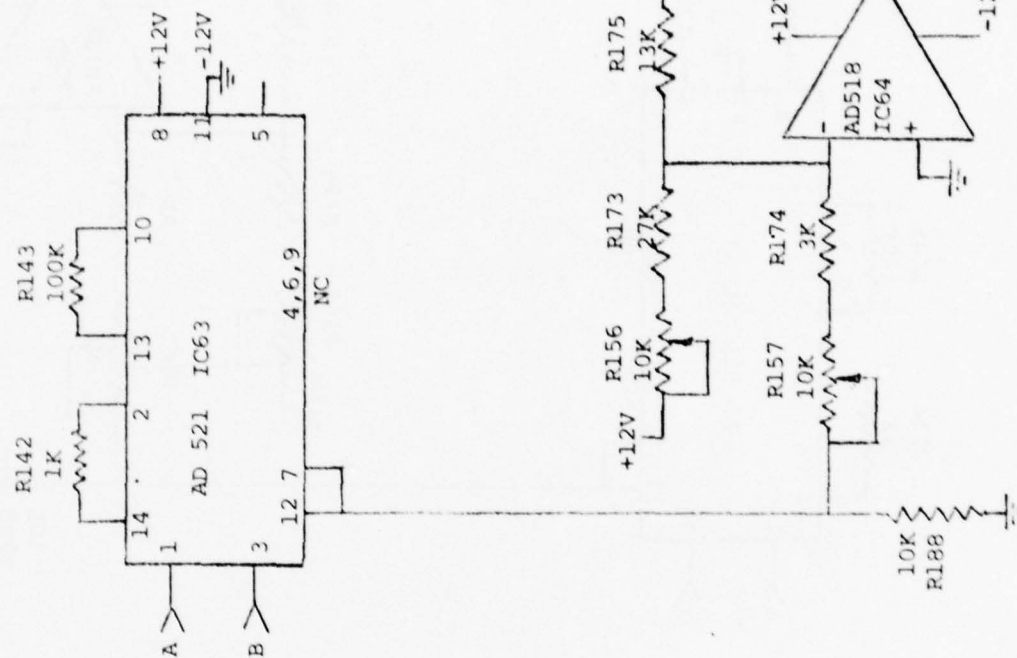

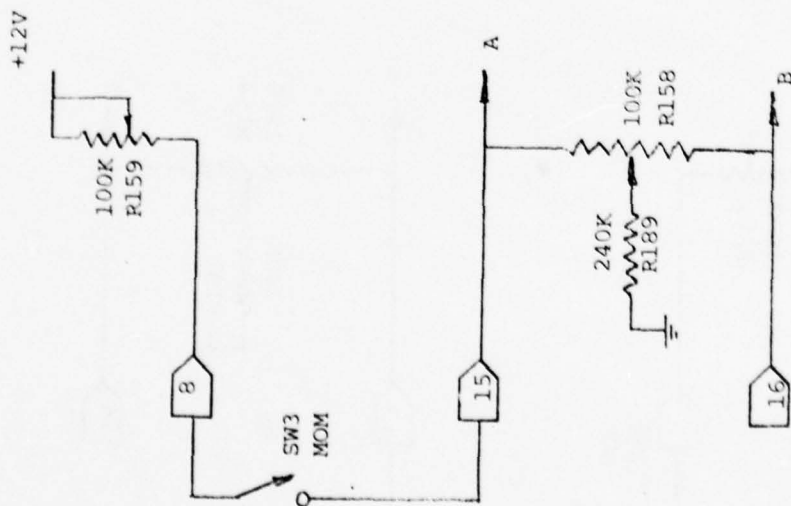
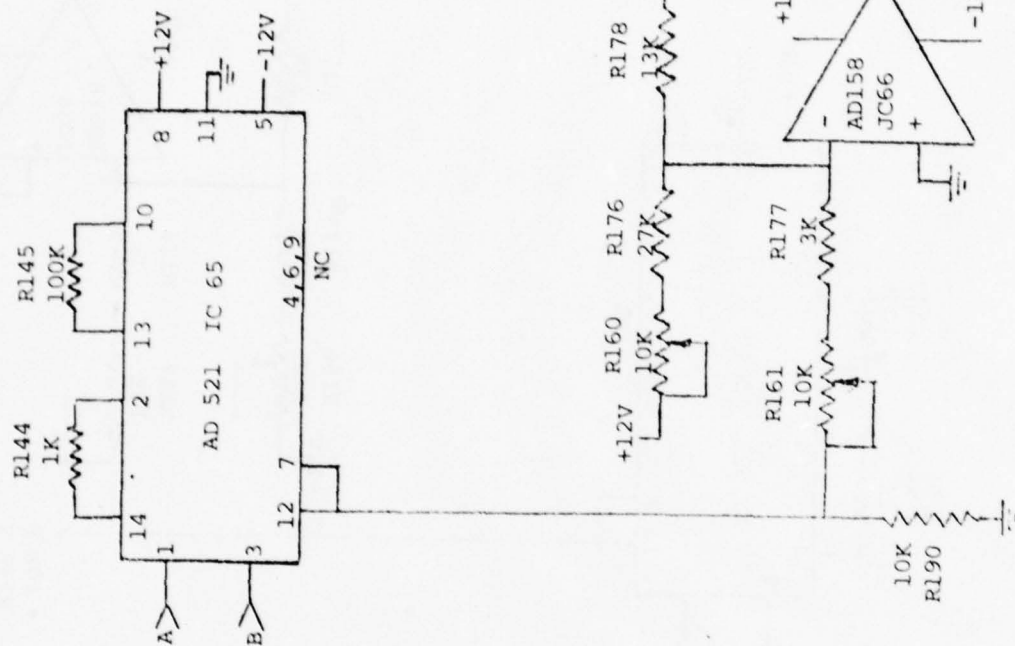


5H  
SHT 4

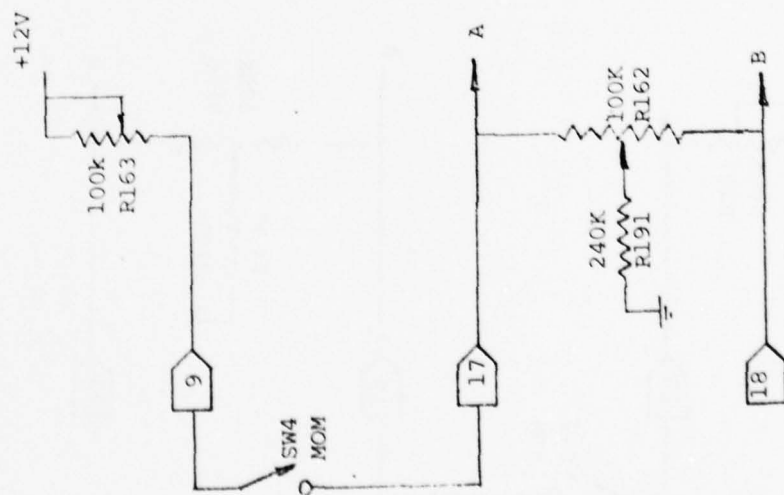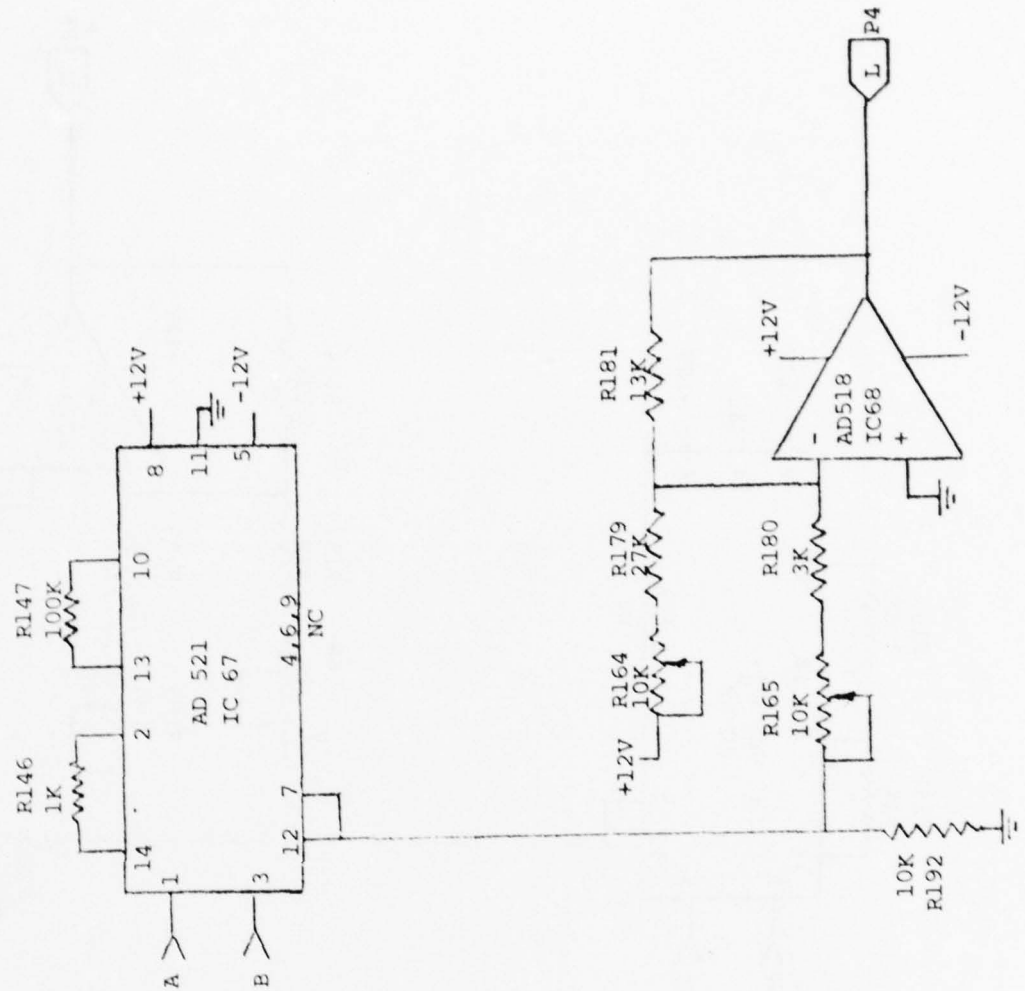

A-9

5 Hole

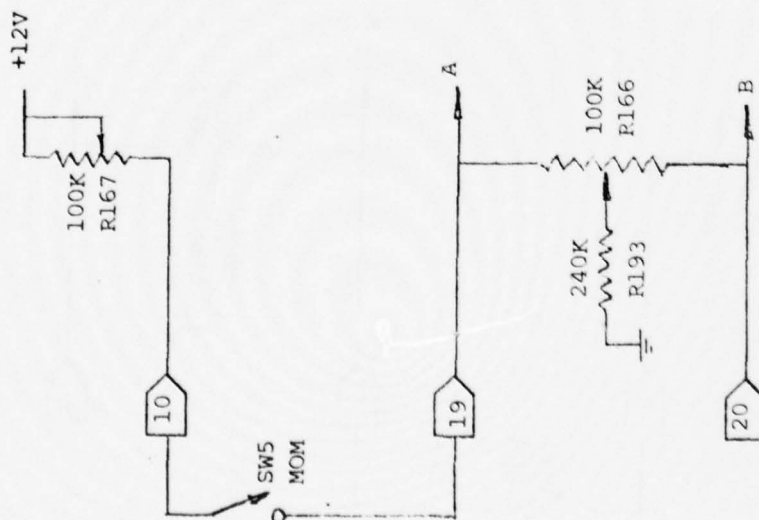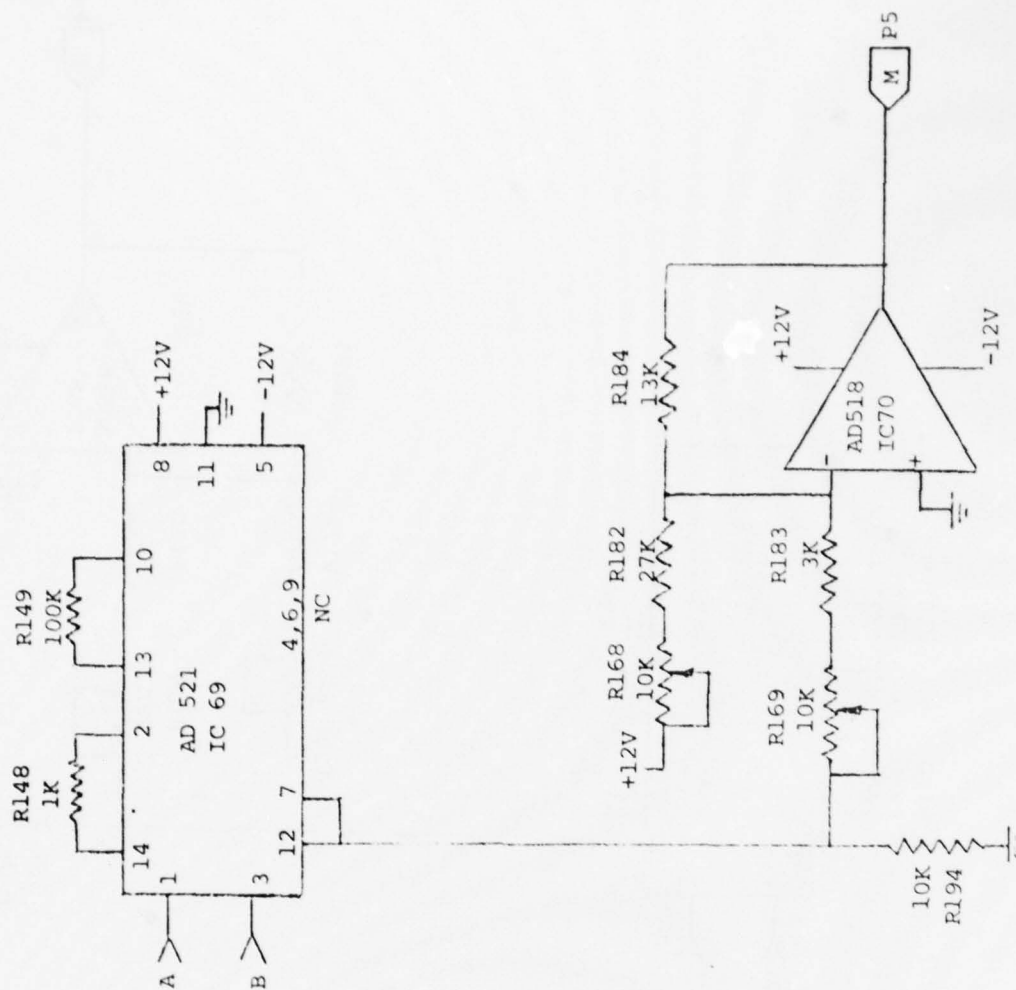

## APPENDIX B Master Controller Logic

### Flip-Flops

1. A counter flip-flop ( $FF_1$ ) = 1 if the  $C_{max}$  counter is equal to or greater than 1 but less than the setting on the  $C_{max}$  dials.

$FF_1 = 0$  if the  $C_{max}$  counter is greater than or equal to  $C_{max}$ .

2. A purge flip-flop = 1 if the purge counter reaches the value set by the purge count dials.

Purge = 0, otherwise.

3. A read flipflop = 1 while timer 4 is on, and = 0, otherwise. This is the read flag referred to in the following description. Also, the pulse which sets this flip-flop high is called the "read pulse". Pressure readings will be made only when the read flag is = 1.

The following steps are approximately in the order in which they are executed. Figure B-1 provides a simplified flow chart.

1. Assume timer 1 is on.
2. When timer 1 times out and  $FF_1 = 1$  and purge = 1, start timer 2.
3. When timer 2 times out, start timer 3 and also provide a Bleed off pulse.
4. When timer 1 times out and  $FF_1 = 1$  and purge = 0, start timer 4.
5. When timer 1 times out and  $FF_1 = 0$  and purge = 0, start timer 5.
6. When timer 3 times out, start timer 4.

Along with starting timer 4, also provide a read pulse signal and set the read FF high (equivalent to setting the "read flag high")

7. When timer 4 times out and enable is high, provide a pulse to the Scanivalve (S/V) for both the master and the slaves, also start timer 1 and set Read FF low.



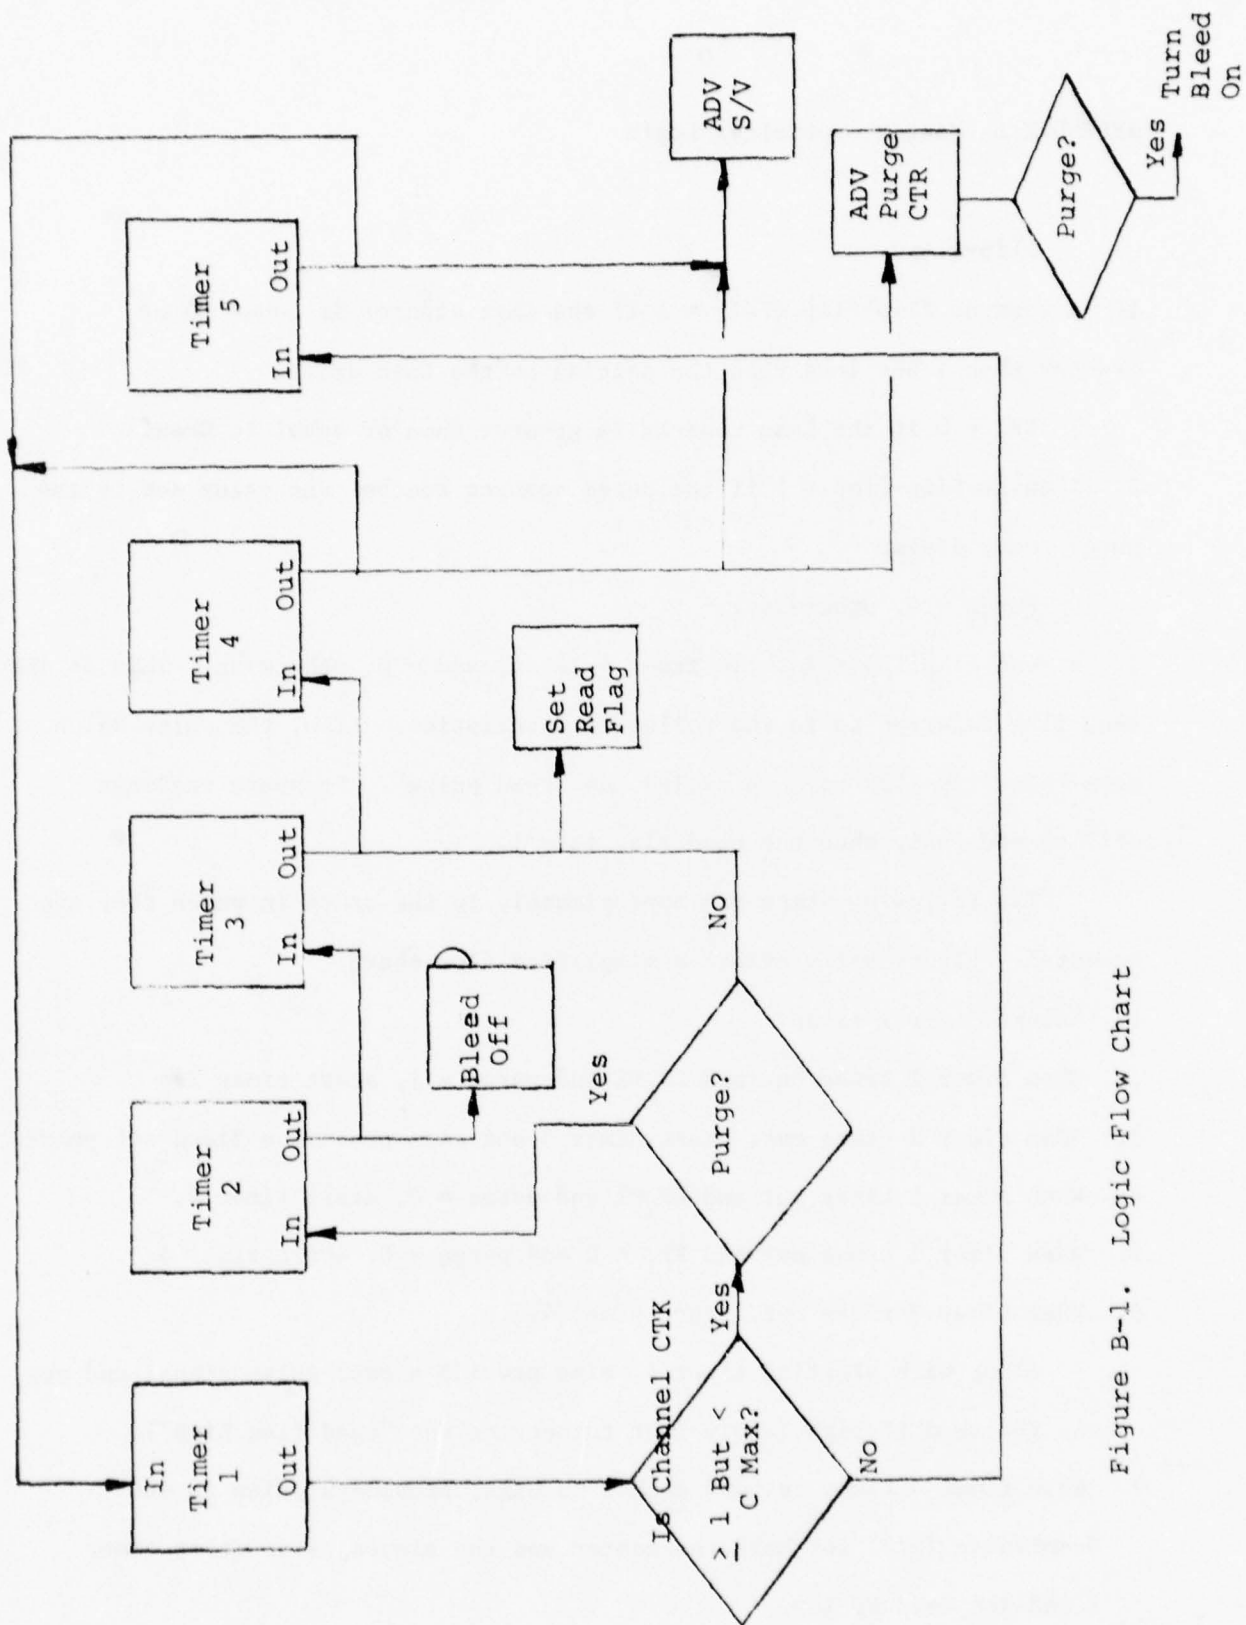


Figure B-1. Logic Flow Chart

8. When timer 4 times out and purge is high, provide a bleed on pulse.
9. When timer 5 times out, advance the S/V and start timer 1.
10. Momentary depression of the start/run switch is equivalent to timer 4 timing out, then the logic rules of 7 and 8 apply.
11. Momentary depression of the S/V adv switch provides a master and slave S/V signal, and starts timer 1.

#### Bleed Off/Bleed On Circuits

A feedback signal from each of the two bleed drives is used, along with the bleed command signal (either off or on) to keep both units in synchronization.

Bleed off signal from the logic circuitry or a manual input command is compared with the status of each of the bleed drives. If the drive is "on", then a pulse is generated to step the solenoid to the next position. If the drive is already "off", the bleed off signal is ignored. This applies to both units 1 and 2.

Similarly, a bleed on signal from the logic circuits or a manual bleed on input command will generate a pulse signal to the drive controller, provided that the unit (1 or 2) has its switch wafer in the "off" position.

The bleed off and bleed on signals also go to the slaved units, where the slaves follow identical logic to determine whether to step their solenoids.

#### Counters

##### a) Cmax counter

Two counter chips (4017) are used for the Cmax counter. Each chip is a decimal counter; one chip is used for units and the other for tens counting. Each chip has outputs 0 to 9, the S/V advance provides the input to the units

chip; a carry signal from the units chip goes to the input of the tens chip. Thus this counter follows the binary counter; each time the Scanivalve advances one channel, the counter advances one count.

A pair of single pole, multiple throw switches allows the value of Cmax to be set. When the counter reaches this value, the Cmax signal is high. When the counter reaches 48, a FF goes high. With the FF high, the counter is reset to 0; resetting can also be accomplished manually using CTR R S.

A second pair of switches provides the input for the Channel X signal. When the count reaches this value, the CHNL X signal is high.

#### b) Purge counter

Similar to the Cmax counter, except that the clock input signal is the read pulse signal. Input switches allow the setting of "purge count". When the count reaches this value, a FF goes high to provide the purge output signal.

This resets the purge counter to 0, as will the Cmax counter reaching 48.

#### Analog Channel Signal

The outputs of the units chip of the Cmax counter are used as inputs to a simple digital to analog converter. The DAC consists of these inputs, suitably weighted, and summed with an op amp. A 2 Hz oscillator supplies a signal to the 5 and 0 channels to add a distinctive oscillation of the pen of the strip chart recorder which is used for this signal.

#### Analog Pressure Signal

The pressure transducer signal processing is also contained in the circuitry. It consists of an instrumentation amplifier and two op amps.

One op amp is used for the analog pressure signal supplied to the computer interface. The other op amp supplies the analog pressure signal to the strip chart recorder. In addition to balance and gain controls on both op amps, the recorder op amp also has an option for suppressing the zero, allowing a better resolution of the pressure signal.

#### Manual Controls

1. Start/run switch. Pushing this switch sets the enable FF high and also gives the start pulse.
2. Stop switch. Pushing this switch sets the enable FF low, halting operation.
3. Continuous run switch. With this switch on, unit continues operation; with this switch in the off position the enable FF is set low when the channel count reaches 48, halting operation.
4. Pause switch. With this switch off, unit proceeds; with this switch on, the enable FF is set low when channel count reaches the "channel x" value, halting operation
5. S/V ADV. Pushing this switch provides a Scanivalve advance reaches signal pulse.
6. Man Bld On. Pushing this switch gives a bleed on pulse.
7. Man Bld Off. Pushing this switch gives a bleed off pulse.
8. CTR Reset. Pushing this switch resets the Cmax counter and the Purge Counter.

Time Controls. On all timers, pots allow a selection of timing intervals.

APPENDIX C  
PARTS LIST & PICTORALS

COMPONENT NUMBERS

	Board No. 1	Board No. 2	Board No. 3	5 H Board
Resistors	1 - 49, 200 - 206	50 - 94	101 - 131	140 - 194
Capacitors	1 - 18	20 - 25	31 - 32	33 - 34
Integrated Circuits	1 - 24	30 - 50, 60	51 - 59	61 - 70
Diodes	8 - 18	1 - 2, 5 - 7	3 - 4	—
Transistors	1 - 6, 9	—	7 - 8	—



PARTS LIST  
RESISTORS (R)

Value	
10 K	1,2,3,4,5,6,7,8,24,25,40,49,50,51,85,101,102,112,124, 186,188,190,192,194,200,203,
5.1 K	9,11,13,15,28,30,77,83,105,106,117,122,
1 M pot	10,12,14,16
150 K	17,21,56
510 K	18,19,20,205,
1K	22,29,31,33,35,37,39,41,42,43,44,65,70,103,104,109,110, 111,113,140,142,144,146,148,
100 K	23,26,32,34,36,38,45,46,47,48,62,72,74,86,87,88,89,90, 91,92,94,107,108,118,131,141,143,145,147,149,201,206,
750	27,
30K	52,53,61,81,121,
62K	54,55,
200K	57,
330K	58,64
1 M	59,60,63
240K	66,114,185,187,189,191,193,
75K	67,69,115,116
100K pot	68,71,73,126,129,130,150,151,154,155,158,159,162,163, 166,167,204,
15K	75,79,82,119,120,123,
10K pot	76,78,80,84,125,127,128,152,153,156,157,160,161,164,165, 168,169,
33K	93,
1500	202,
27K	170,173,176,179,182,
3K	171,174,177,180,183,

Value RESISTORS (cont.)

13K 172,175,178,181,184

CAPACITORS (C)

Value

.1uF 1,2,5,8,11,13,18,20,21,  
 .01uF 3,6,9,12,14,16,25,  
 10uF 4,7,10,23,24,31,32,33,34,  
 50uF 15,  
 1 F 17,32

I.C.'s (IC)


No.

4011 Nand 1,2,3,5,8,9,30,35,37,60,  
 2 Input  
 4002 Nor 4  
 4 Input  
 4049 Hex 6,32  
 Invertor  
 4001 Nor 7,14,15,16,31,36,38,51,59  
 2 Input  
 4N28 Optical 10,11,17,18,19,20,21,22,23,45,46,47,48,49,50,52,  
 Coupler 53,54,55,  
 NE 556 12,13,  
 Timer  
 NE 555 24,  
 Timer  
 4017 Counter 33,34,39,40,

No.	I.C.'s (cont.)
AD 741 Op. Amp	41,43,44,57,58,
AD 518 Op. Amp	62,64,66,68,70
AD 521 Diff. Amp	42,56,61,63,65,67,69,

No.	DIODES (CR)
IN 914	1,2,3,4,5,6,7,8,9,15,16,17,18,
LED	10,11,12,13,14,

	TRANSISTORS (Q)
MPS6523	1,3,4,5,6,7,8,
MPS6521	2,
2N3904	9,

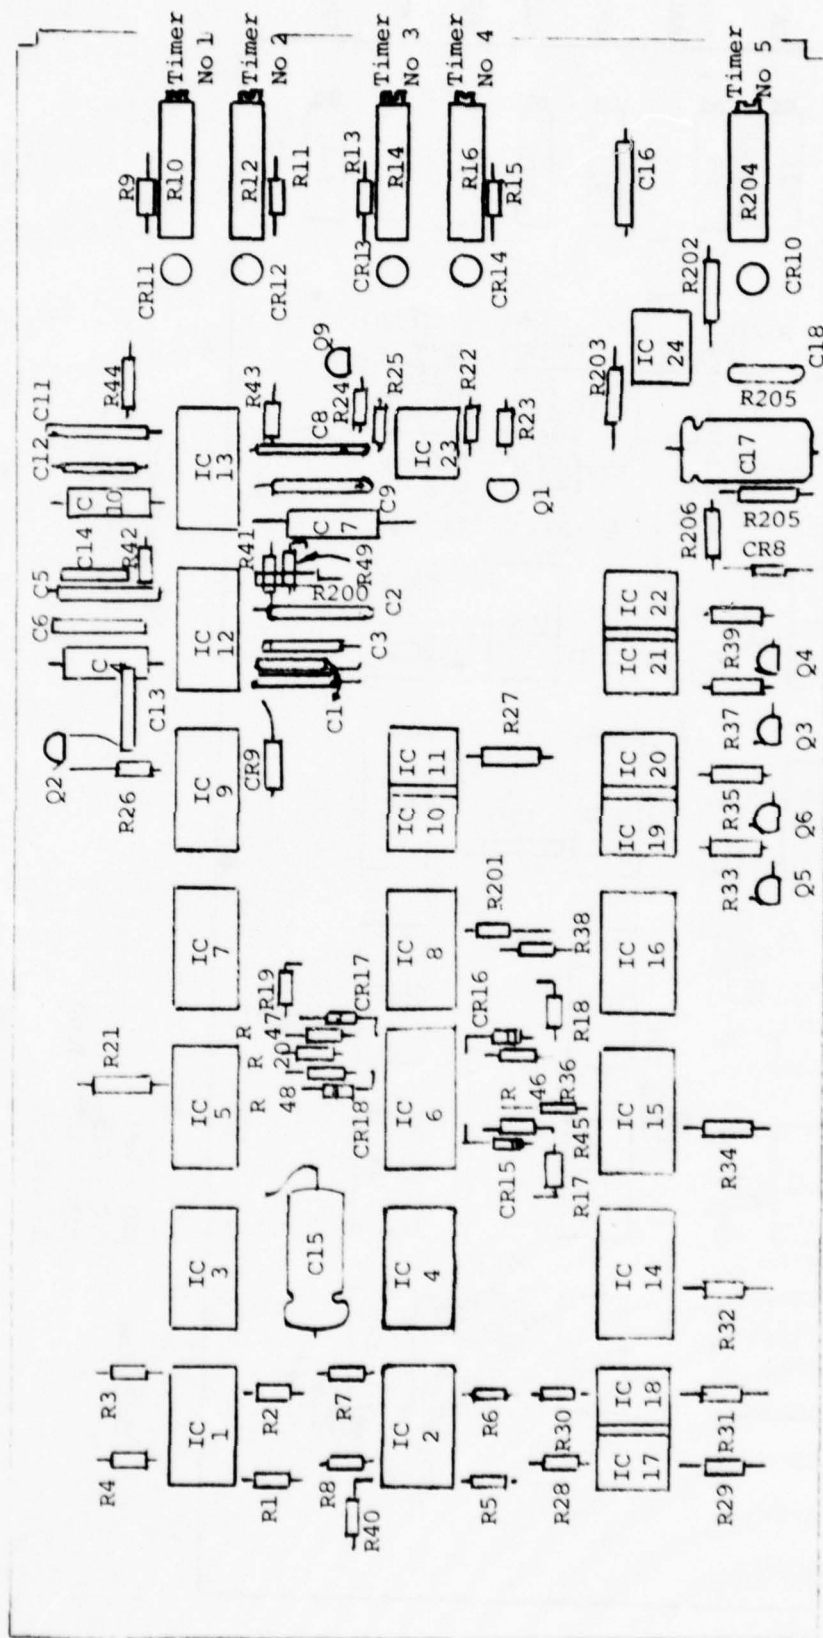

Contains R1 - R49, R200 - R206


C1 - C18

IC1 - CR18

CR8 - CR18

Q1 - Q6, Q9

Component Placement Board No. I

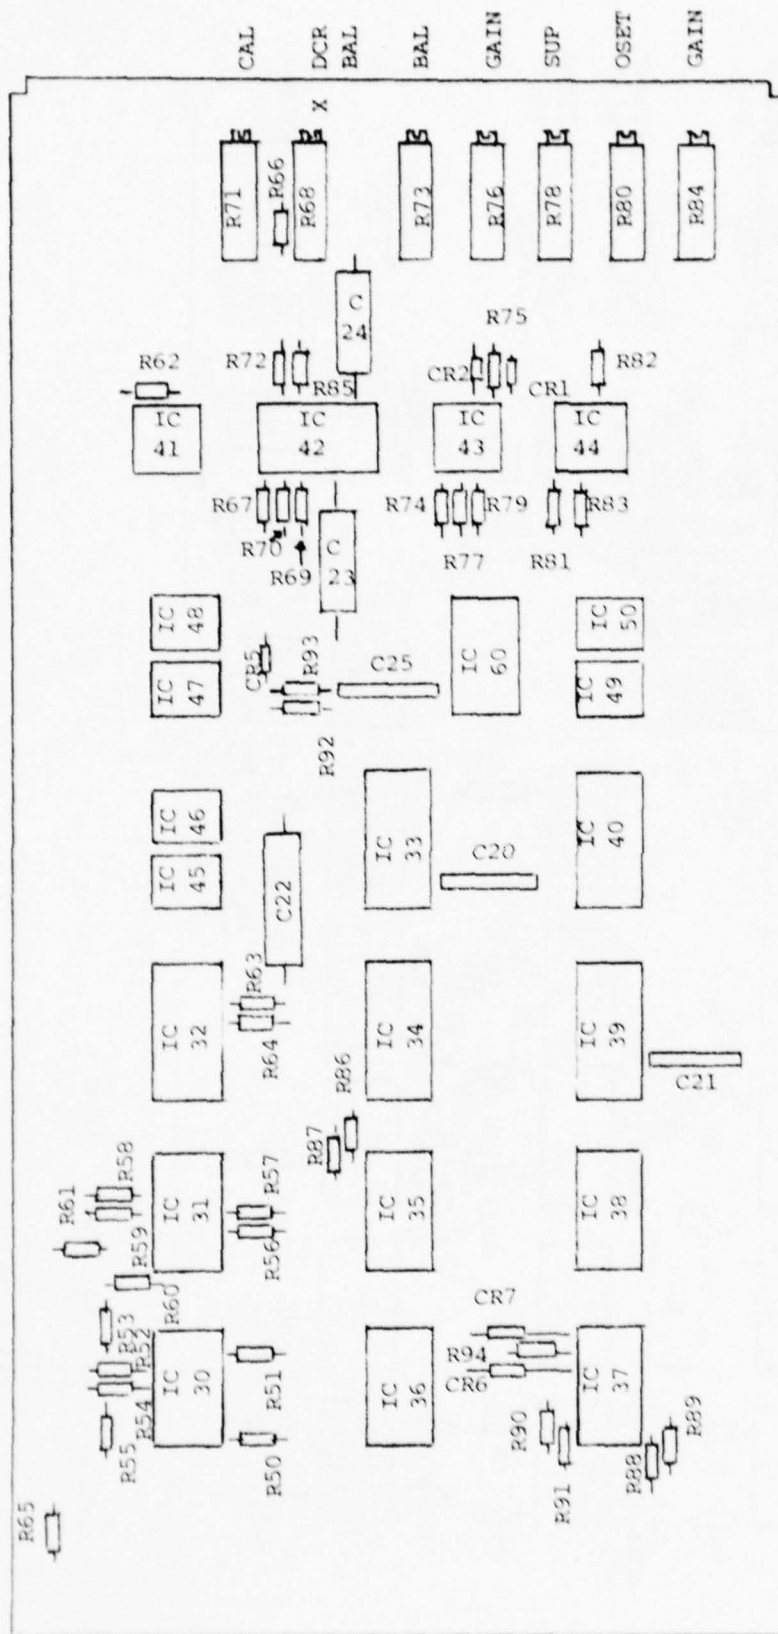

Circuit Board  
No. 2  
6/13/77


Contains  
R50 - R94  
C20 - C25  
IC30 - IC50, IC60  
CR 1,2,5-7

Component Placement Board No. 2




Diodes CR3, CR4

27.28

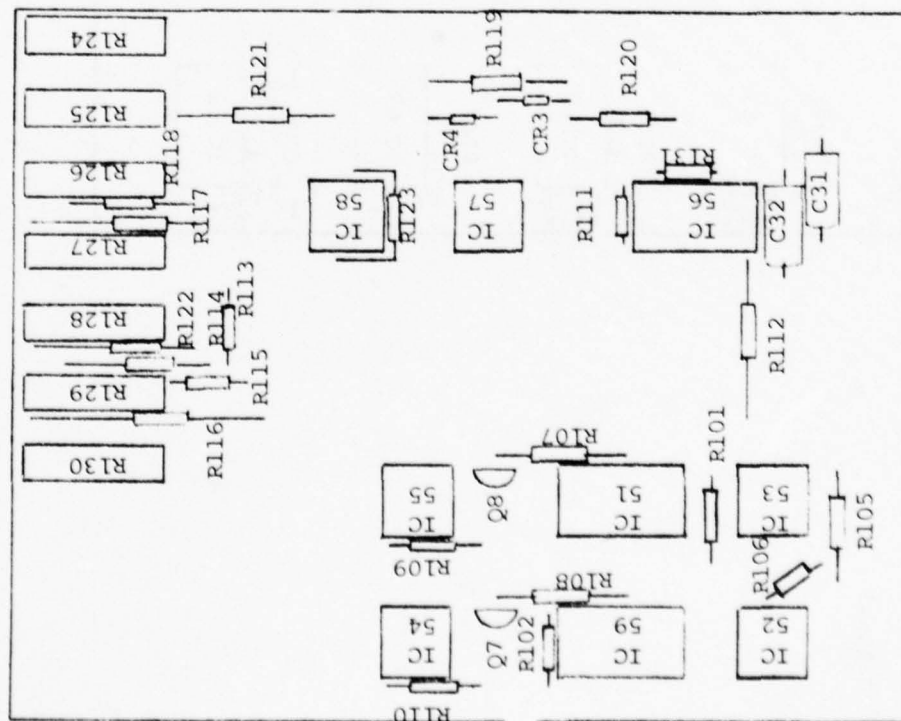


Board 3A

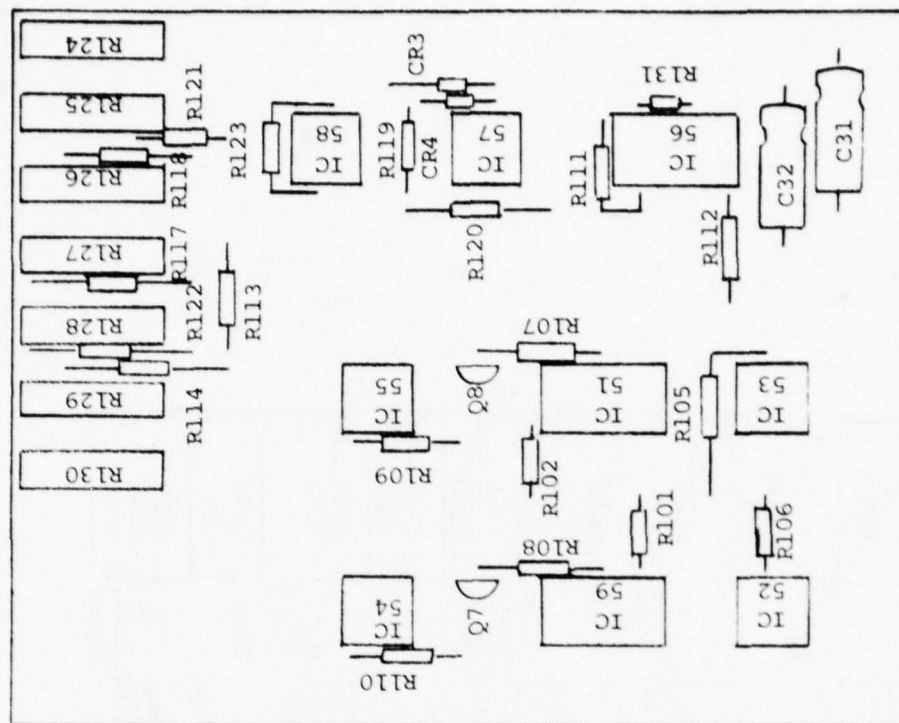

Board 3B &amp; 3C

Slave Circuit Component Placement Board No. 3

Contains:  
 IC 61-70  
 R 140-194  
 C 33-34

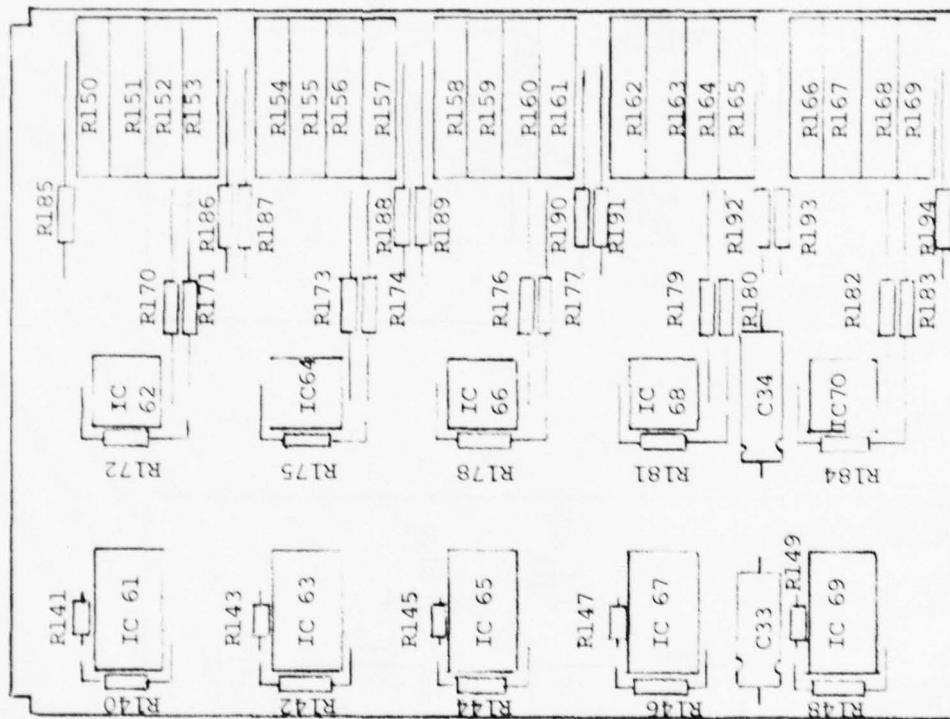

Component Placement 5 H Board

# RECEPTACLE

1	44	Pins	Board #1
2	72	Pins	Board #2
3	3	Pins	+12V Power in
4 } 5 } 6 } 7 }	5	Pins	+12V Power out
8	9	Pins	Main Controller ADV
9	5	Pins	Raw Pressure in
10 } 11 } 12 }	9	Pins	Slave ADV Signals & Press
13	5	Pins	Solenoid Position FDBK
14	9	Pins	Channel Signal
15	16	Pins	Data to Computer Terminal

A) Board #1 44

# CONNECTORS

1 SW1	A +12
2 SW1	B Master S/V
3 SW2	C Master S/V
4 SW2	D Slave S/V
5 SW3	E Slave S/V
6 SW3	F Sol #1 Input
7 SW4	H Sol #1 Input
8 SW4	J Sol #2 Input
9 SW6	K Sol #2 Input
10 Clock Pulse	L Bleed Off Slave
11 SW7	M Bleed Off Slave
12	N Bleed on Slave
13 SW8	P Bleed on Slave
14	R Sol #1 out
15 CMIN	S Sol #1 out
16 CMAX	T Sol #2 out
17 Purge	U Sol #2 out
18 Read Pulse	V S/V ADV to BD #2
19 Read Flag	W B-Off to BD #2
20 Customer V <sup>+</sup>	X B-On to BD #2
21 Customer 6ND	Y
22	Z GND

## Connectors Board #2 Even

2	38 SW9 8
4 +12	40 SW9 9
6 GND	42 SW9 WIPER
8 GND	44 SW10 0

# Even Connectors Board #2 (cont.)

10 -15	46 SW10 1
12	48 SW10 2
14 SW5	50 SW10 3
16 SW5	52 SW10 4
18 Read Pulse	54 SW10 WIPER
20 Clk.	56 SW11 WIPER
22 SW9 0	58 SW12 WIPER
24 SW9 1	60 SW13 0
26 SW9 2	62 SW13 2
28 SW9 3	64 SW13 4
30 SW9 4	66 SW13 6
32 SW9 5	68 SW13 8
34 SW9 6	70 S/V ADV Input
36 Sw9 7	72 Slave #2 S/V

## Odd

1 Slave #2 S/V	37 Slave #3 B-on
3 Slave #3 S/V	39 CMIN
5 Slave #3 S/V	41 CMAX
7 SW13 WIPER	43 CHLX
9 SW14 0	45 "48"
11 SW14 1	47 Purge
13 SW14 2	49 Slave #3 B-on
15 Slave #2 B-off	51 Red
17 Slave #2 B-off	53 Calibr SW15
19 SW14 WIPER	55 Calibr SW15
21 Computer press sig	57 Yel.
23 Computer press sig	59 Bl.
25 B-off Input	61 Grn.
27 Slave #3 B-off	63 Shield
29 Slave #3 B-off	65 Suppress SW16
31 B-on Input	67 Suppress SW16
33 Slave #2 B-off	69 Strip Chart Signal Out Analog
35 Slave #2 B-off	71 Strip Chart Spin 2 Channel

Analog  
Pressure



# MAIN BOX WIRING

FROM RECEPT.	PIN
1	1
1	2
1	3
1	4
1	5
1	6
1	7
1	8
1	9
1	10
1	11
1	12
1	13
1	14
1	15
1	16
1	17
1	18
1	19
1	20
1	21
1	22

TO RECEPT.	PIN
SW	1
SW	1
SW	2
SW	2
SW	3
SW	3
SW	4
SW	4
SW	6
Resistor	
SW	7
2	20
SW	8
2	39
2	41
2	47
2	18
15	15
15	2 or 3 or 4
15	1

FROM RECEPT.	PIN
1	A
1	B
1	C
1	D
1	E
1	F
1	H
1	J
1	K
1	L
1	M
1	N
1	P
1	R
1	S
1	T
1	U
1	V
1	W
1	X
1	Y
1	Z

TO RECEPT.	PIN
SW	17 V+
8	A
8	B
10	A
10	B
13	A
13	B
13	D
13	E
10	E
10	F
10	C
10	D
8	C
8	E
8	H
8	J
2	70
2	25
2	31

GND Pin B, recept. 3

# MAIN BOX WIRING

FROM	TO
2   1	11   B
2   3	12   A
2   5	12   B
2   7	SW   13 WIPER
2   9	SW   14 "0"
2   11	SW   14 1
2   13	SW   14 2
2   15	11   E
2   17	11   F
2   19	SW   14 WIPER
2   21	15   5
2   23	15   16 (GND)
2   25	1   W
2   27	12   E
2   29	12   F
2   31	1   X
2   33	11   C
2   35	11   D
2   37	12   C
2   39	1   15
2   41	1   16
2   43	SW   8
2   45	SW   7
2   47	1   17 purge
2   49	12   D
2   51	9   A
2   53	SW   9 Calibr.
2   55	SW   9
2   57	9   B
2   59	9   D
2   61	9   H
2   63	9   E
2   65	SW   10 suppress
2   67	SW   10
2   69	Strip Chart Barrier 1
2   71	Strip Chart Barrier 2
2   2	
2   4	SW   17 V+
2   6	GND Pin B, recept. 3
2   8	GND
2   10	SW   17 V-
2   12	
2   14	SW   5
2   16	SW   5
2   18	1   18
2   20	1   12
2   22	SW   9 "0"
2   24	SW   9 1

# MAIN BOX WIRING (cont.)

FROM	TO
2   26	SW   9 2
2   28	SW   9 3
2   30	SW   9 4
2   32	SW   9 5
2   34	SW   9 6
2   36	SW   9 "7"
2   38	SW   9 "8"
2   40	9
2   42	SW   9 WIPER
2   44	SW   10 "0"
2   46	1
2   48	2
2   50	3
2   52	4
2   54	SW   10 WIPER
2   56	SW   11 WIPER
2   58	SW   12 WIPER
2   60	SW   13 "0"
2   62	2
2   64	4
2   66	6
2   68	"8"
2   70	1 V
2   72	11 A
3   A	4 D
3   B	4 A
3   C	4 E
4   A +12	4 B GND
4   B Odd	4 A GND
4   D -12V	5 D +12
4   E	5 E -12
4   H	
5   A	5 B
5   B	6 A
5   D	6 D
5   E	6 E
5   H	
6   A	6 B
6   B	7 A
6   D	7 D
6   E	7 E
6   H	
7   A	7 B
7   B	7 A
7   D	6 D
7   E	6 E
7   H	

# MAIN BOX WIRING (cont.)

FROM		TO		
8	A	"5"	1	B Master S/V
8	B	"4"	1	C
8	C	"5"	1	R } Sol #1
8	D		1	S } Master
8	E	"4"	1	T } Sol #2
8	F		1	W }
8	H	"5"		
8	J	"4"		
8	K			
9	A	Red	2	51
9	B	Yl.	2	57
9	D	Bl.	2	59
9	E	SHLD	2	63
9	H	Grn.	2	61
10	A		1	D S/V
10	B		1	E
10	C		1	N Bleed on
10	D		1	P
10	E		1	L Bleed off
10	F		1	M
10	H		15	6 Pressure to terminal
10	J			GND
10	K			
11	A		2	72 S/V
11	B		2	1
11	C		2	33 Bld on
11	D		2	39
11	E		2	15 Bld off
11	F		2	17
11	H		15	7 Pressure to terminal
11	J			GND
11	K			
12	A		2	3 S/V
12	B		2	5
12	C		2	37 Bld on
12	D		2	49
12	E		2	27 Bld off
12	F		2	29
12	H		15	8 Press. to terminal
12	J			GND
12	K			
13	A	V+	1	F Sol #1
13	B		1	H Pos
13	D	V+	1	J FDBK
13	E		1	K Sol #2
13	H			

# MAIN BOX WIRING (cont.)

FROM	TO
14 A "1"	15 9
14 B 2	15 10
14 C 4	15 11
14 D 8	15 12
14 E 16	15 13
14 F 32	15 14
14 H clock	
14 J V+	15 2,3,4
14 K	15 1
15 1	14 K Common
15 2	14 J V+
15 3	15 2
15 4	15 3
15 5	2 21 Pressure Main >
15 6	10 H Slave 1 >
15 7	11 H Slave 2 >
15 8	12 H Slave 3 >
15 9 1K Resistor to 15-2	14 A 1
15 10 1K Resistor to 15-2	14 B 2 >
15 11 1K " " "	14 C 4 >
15 12 1K " " "	14 D 8 >
15 13 1K " " "	14 E 16 >
15 14 1K " " "	14 F 32 >
15 15 1K " " "	1 19 Read
15 16	GND Signal GDN
SW 1	1 1
SW 1	1 2
SW 2	1 3
SW 2	1 4
SW 3	1 5
SW 3	1 6
SW 4	1 7
SW 4	1 8
SW 5	2 14
SW 5	2 16
SW 6	1 9
SW 7	1 11
SW 8	1 13
SW 9 "0"	2 22
1	2 24
2	2 26



# MAIN BOX WIRING (cont.)

FROM		To	
	3	2	28
	4	2	30
	5	2	32
	6	2	34
	7	2	36
	8	2	38
	9	2	40
	WIPER	2	42
SW	10 "0"	2	44
	1	2	46
	2	2	48
	3	2	50
	4	2	52
	WIPER	2	54
SW	11 WIPER	2	56
SW	12 WIPER	2	58
SW	13 0	2	60
	2	2	62
	4	2	64
	6	2	66
	8	2	68
	WIPER	2	7
SW	14 "0"	2	9
	1	2	11
	2	2	13
	WIPER	2	19
SW	15	2	53
	15	2	55
SW	16	2	65
	16	2	67

# SLAVE BOX

## CABLE TERMINATIONS

A	Raw press signal	5
C	Sol posit fdbk	5
D	CTLR AVD	9
F	AVD SIG FROM MSTR	9
H	+ 12V	5

## RECEPTABLES

1	44 pins	Board #3
2	5 pins	+ 12V
3	5 pins	SOL FDBK
4	5 pins	Raw Press.
5	9 pins	CTLR ADV
6	9 pins	ADV Sig from master

# SLAVE BOX WIRING SHT 1 REVISED E-2

## FROM

1	8
1	9
1	10
1	11
1	12
1	13
1	14
1	15
1	16
1	17 SHLD
1	18 GRN
1	19 BL
1	20 YEL
1	21 RED
1	22

1	A
1	B
1	C
1	D
1	E
1	F
1	H
1	J
1	K
1	L
1	M
1	N
1	R
1	X
1	Y
1	Z

2	A
2	B

## TO

Suppress sw  
Suppress sw  
to barrier strip  
gnd to barrier strip  
6 | H  
G | ND  
CAL SW  
CAL SW

4	E
4	H
4	D
4	B
4	A

2	D	power swt
3	A	
3	D	
3	B	
3	E	
6	C	
6	E	

5	C
5	E
5	H
5	J
Power SW-	
6	F
6	D
2	A GND

1	Z	}
2	A	

POWER

## FROM

2 D  
2 E  
2 H

3 A V+  
3 B  
3 D V+  
3 E  
3 H

4 A red  
4 B YL  
4 D BL  
4 E SHLD  
4 H GRN

5 A "5"  
5 B 4  
5 C 5  
5 D  
5 E 4  
5 F  
5 H 5  
5 J 4  
5 K

6 A 5  
6 B 4  
6 C 5  
6 D 4  
6 E 5  
6 F 4  
6 H  
6 J  
6 K

## TO

POWER SW + 12  
POWER SW - 12 } power

1 B Sol #1  
1 D  
1 C Sol #2  
1 E } SOL  
FDBK

1 21  
1 20  
1 19  
1 17 GND  
1 18 } Row  
Press

## CONTROLLER ADV

6 A  
6 B  
1 K } SIV  
1 L } SOL #1  
1 M  
1 N } SOL #2

5 A SIV  
5 B  
1 F Bld ON  
1 Y  
1 H Bld OFF  
1 X  
1 12 Press to Master box  
GND

# CONNECTORS - 5 HOLE

1	+12 IN	A	+12 IN
2	+12 XDCR	B	+12 XDCR
3		C	
4		D	
5	GND IN	E	GND IN
6	CAL SW 1	F	GND
7	CAL SW 2	H	P SIGNAL 1
8	3	J	2
9	4	K	3
10	5	L	4
11	} XDCR 1	M	5
12		N	
13	} XDCR 2	P	
14		R	
15	} XDCR 3	S	
16		T	
17	} XDCR 4	U	
18		V	
19	} XDCR 5	W	
20		X	
21		Y	
22	-12 IN	Z	-12 IN

## 5-H BOX

### CABLE TERMINATIONS

H + 12V 5  
J FROM XDCRS 16  
K TO COMPUTER 16

### RECEPTACLES

1 44 PINS  
2 5 PINS + 12V  
3 16 PINS FROM XDCRS  
4 16 PINS TO COMPUTER

### BARRIER STRIP

## 5-H BOX WIRING

### FROM

1 1  
1 2  
1 3  
1 4  
1 5  
1 6  
1 7  
1 8  
1 9  
1 10

### TO

TO POWER SW +12V  
3  
-----  
-----  
GND  
SW 1  
SW 2  
SW 3  
SW 4  
SW 5

## FROM

1 11  
1 12  
1 13  
1 14  
1 15  
1 16  
1 17  
1 18  
1 19  
1 20  
1 21  
1 22

1 A  
1 B  
1 C  
1 D  
1 E  
1 F  
1 H  
1 J  
1 K  
1 L  
1 M

1 Z

2 A  
2 B  
2 D  
2 E

3 1  
3 2  
3 3  
3 4  
3 5  
3 6  
3 7  
3 8  
3 9  
3 10  
3 11  
3 12  
3 13  
3 14  
3 15  
3 16

## TO

3 4 } also to cal SW 1  
3 5 }  
3 7 } also to SW 2  
3 8 }  
3 9 } also to SW 3  
3 10 }  
3 12 } also to SW 4  
3 13 }  
3 15 } also to SW 5  
3 16 }

## POWER SW -12V

1 1  
3 1

1 5 & 3/2  
4 GND  
4 PI  
4 II  
4 III  
4 IV  
4 V

These signals  
also  
go to  
barrier  
strip

1 22 (GND)

GND

GND

+ 12V TO POWER SW

- 12V TO POWER SW

1 B +12V  
1 E GND

1 11 XDCR I  
1 12  
GND (Jumpered)  
1 13 XDCR II  
1 14 XDCR  
1 15 XDCR III  
1 16  
GND (Jumpered)  
1 17 XDCR IV  
1 18  
GND (Jumpered)  
1 19 XDCR V  
1 20



FROM	
4	1
4	2
4	3
4	4
4	5
4	6
4	7
4	8
4	9
4	10
4	11
4	12
4	13
4	14
4	15
4	16

TO		
1	H	P I
GND		
1	J	P II
GND		
1	K	P III
GND		
1	L	P IV
GND		
1	M	P V
GND		

# TERMINAL BOX WIRING

1 1  
1 2  
1 3  
1 4  
1 5  
1 6  
1 7  
1 8  
1 9  
1 10  
1 11  
1 16

Barrier strip 20 I  
GND  
21 II  
GND  
22 III  
GND  
23 IV  
GND  
24 V  
25 GND

2 1  
2 2  
2 3  
2 4  
2 5  
2 6  
2 7  
2 8  
2 9  
2 10  
2 11  
2 12  
2 13  
2 14  
2 15  
2 16

Barrier strip 1 common  
2 V+

Barrier strip 11 Press row  
12 Sl 1  
13 2  
14 3


Barrier strip 3 "1"  
4 "2"  
5 "4"  
6 "8"

Barrier strip 7 "16"  
8 "32"  
9 "Read"  
10 Signal Gnd

# CABLES LIST

Quantity 3

## SLAVE POWER CABLES

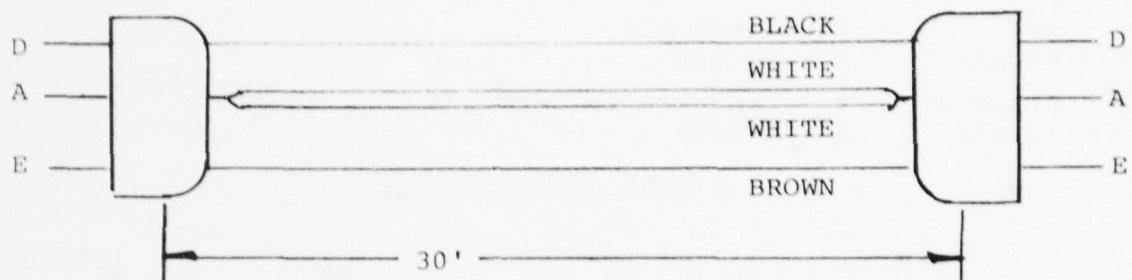


Cable ends terminated in AMPHENOL 5-pin plugs type no. 126-010. Plugs are painted red and are connected between Master box slave power out and Slave box power in.

D - +12  
A - Ground  
E - -12

Quantity 3

## MASTER/SLAVE CONTROL CABLES

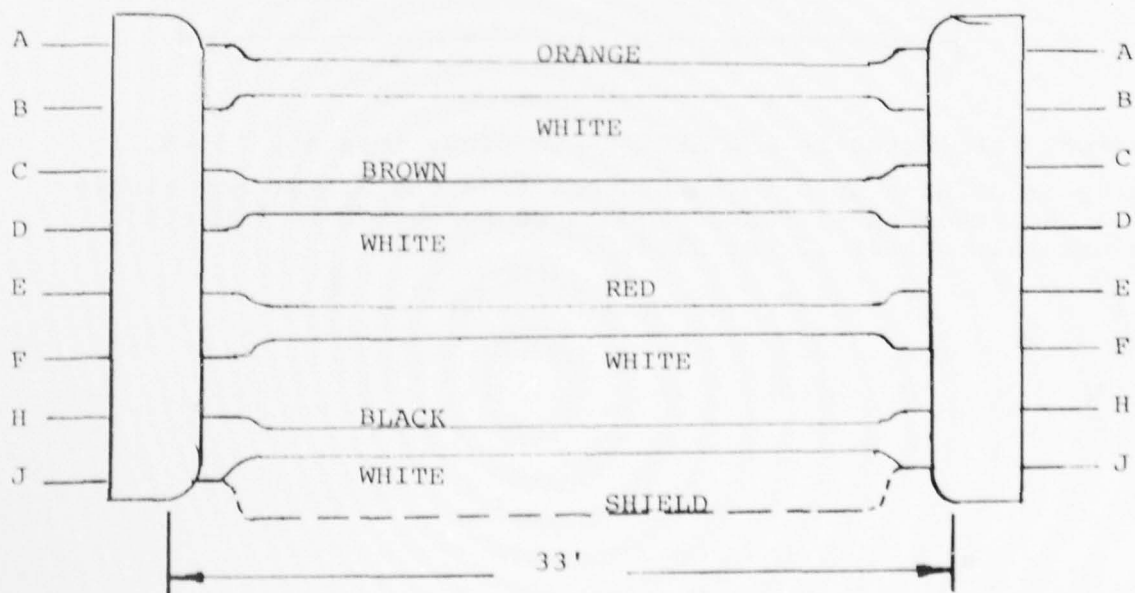

# CABLE LIST (cont.)


Cable ends terminated in AMPHENOL 9-pin plugs type no. 126-012.

Plugs are painted blue and are connected between Master box slave control out and Slave box control in.

A - S/V	E - Bleed off
B - return	F - return
C - Bleed on	H - Pressure to terminal
D - return	J - return

Quantity 1

## BINARY COUNTER CABLE

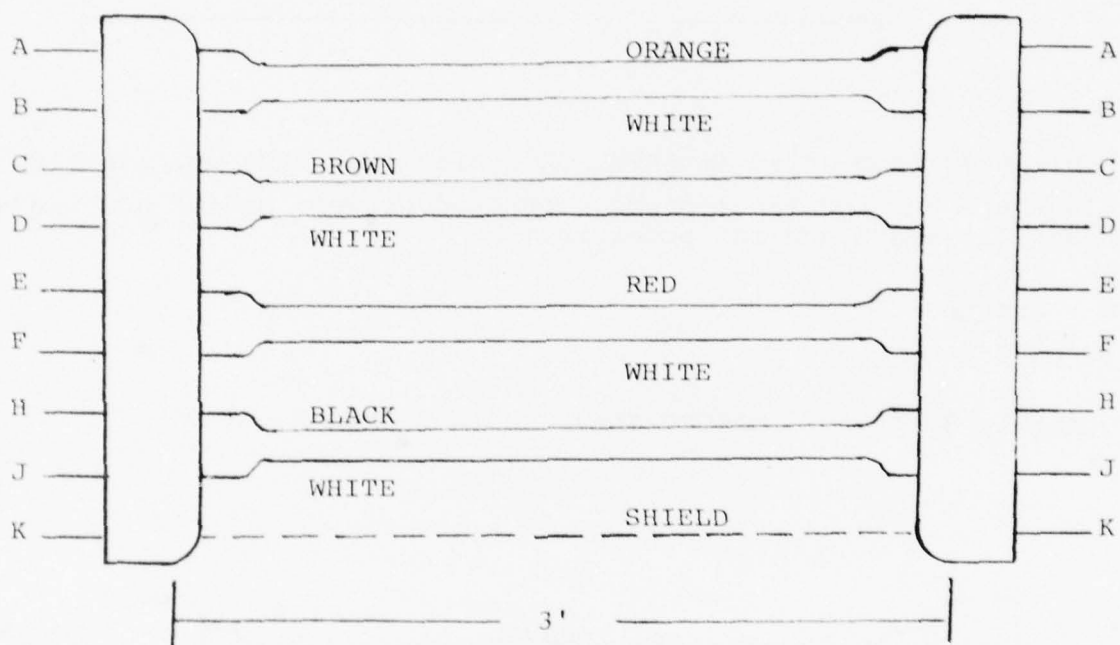

Cable ends terminated in AMPHENOL 9-pin plugs type no. 126-012.


One plug is painted gold to be plugged into the Master box binary input. The other end is unpainted to be connected to the scani-valve channel counter socket J104.

A - "1"	E - "16"	K - Common
B - "2"	F - "32"	
C - "4"	H - clock	
D - "8"	J - $V^+$	

Quantity 2

CABLE LIST (cont.)

5 - H XDCR CABLE

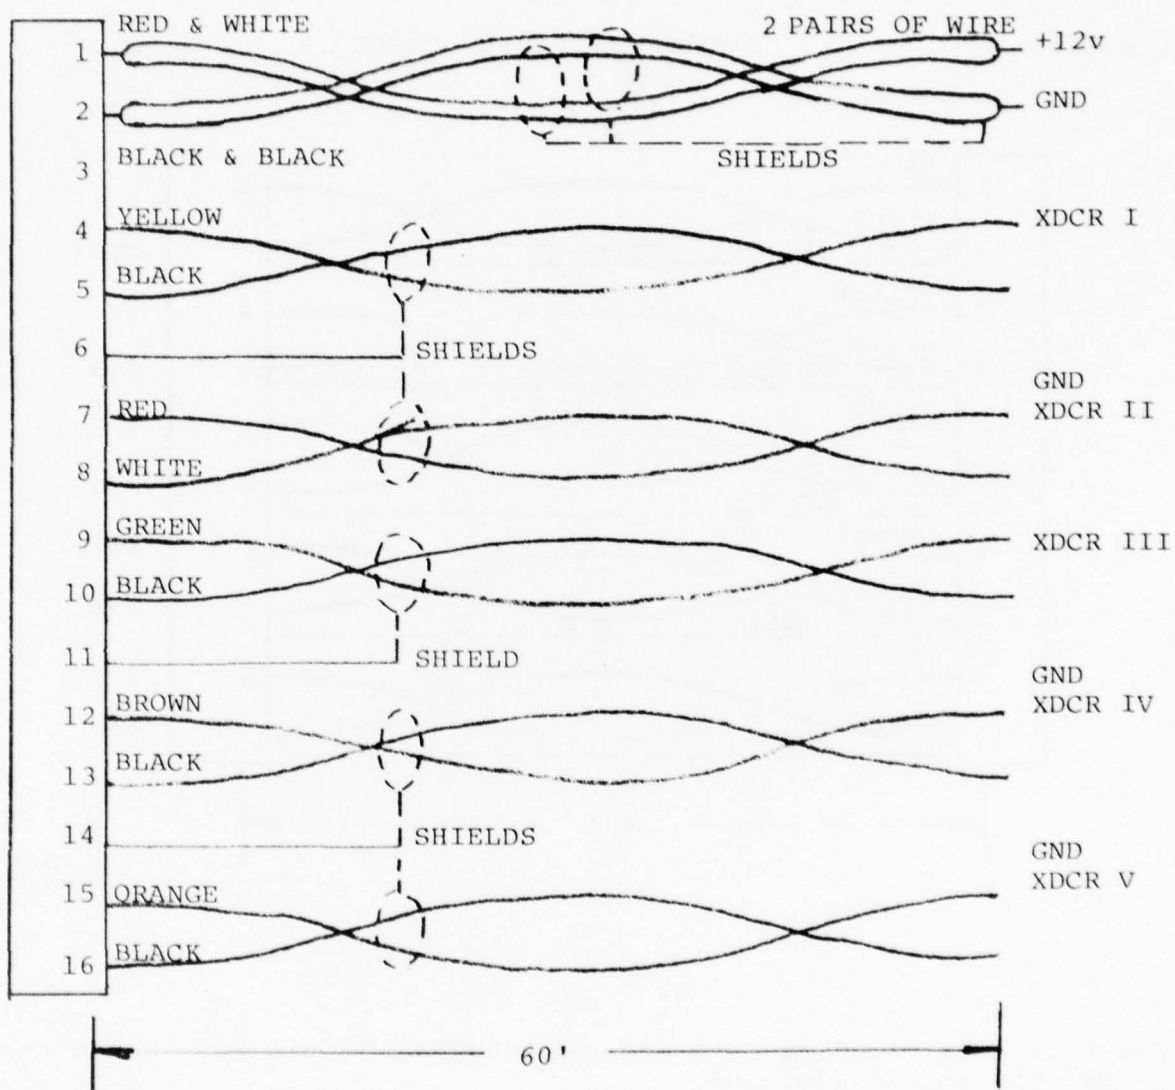

Cable is terminated at one end in an AMPHENOL 16-pin key locked shell plug type no. 26-4301-16P. This end is to be connected to 5H board box XDCR input.


The other end connects to 5 transducers.



# CABLES LIST (cont.)

Quantity 1

TRANSDUCER OUTPUT CABLE

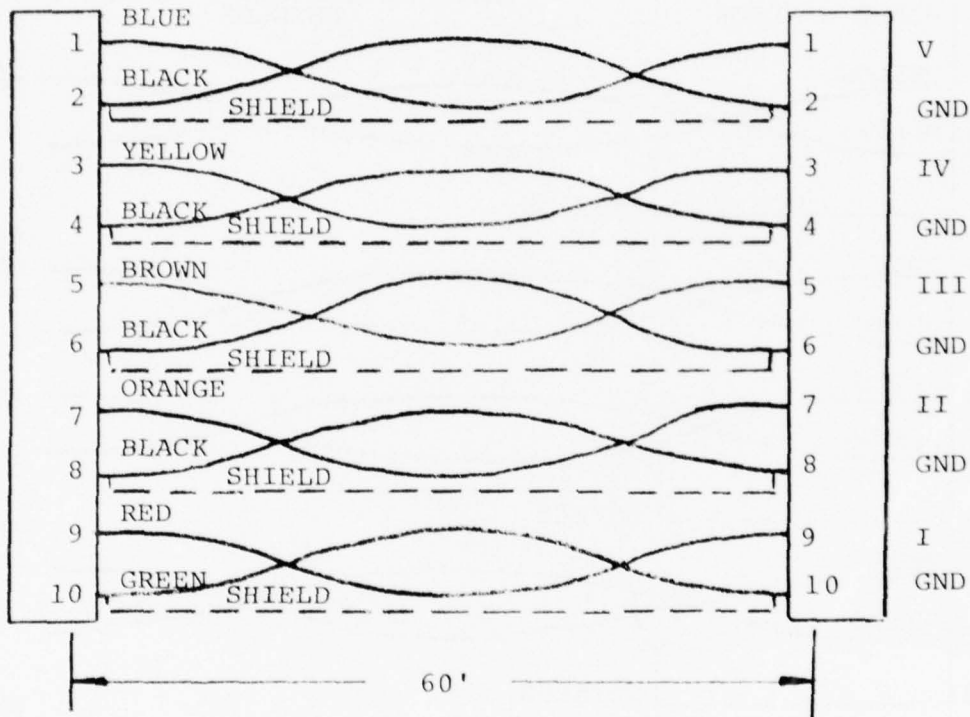


Cable is terminated at both ends in AMPHENOL 16-pin key locked shell plugs type no. 26-4301-16P.

Connection is to be made between the 5H board box XDCR output and the terminal box input.

CABLE LIST (cont.)

Quantity 4

CONTROLLER ADVANCE CABLES

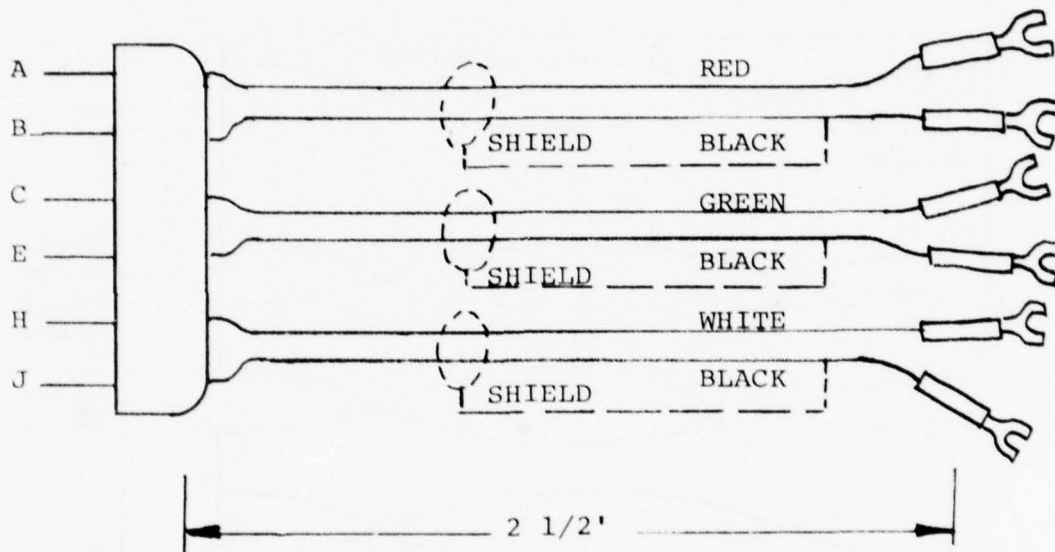

One end is terminated in an AMPHENOL 9-pin plug type no. 126-012. Plug is painted yellow to be connected to Master box control output.

The other end is terminated in spade lugs to be connected as follows:

Red-Black pair to S/V solenoid controller.

-red to pin 8, black to pin 5.

Green-Black pair to solenoid controller #1.

-green to pin 8, black to pin 5.


White-Black pair to solenoid controller #2.

-white to pin 8, black to pin 5.

# CABLE LIST (cont.)

Quantity 1

MASTER TO TERMINAL CABLE

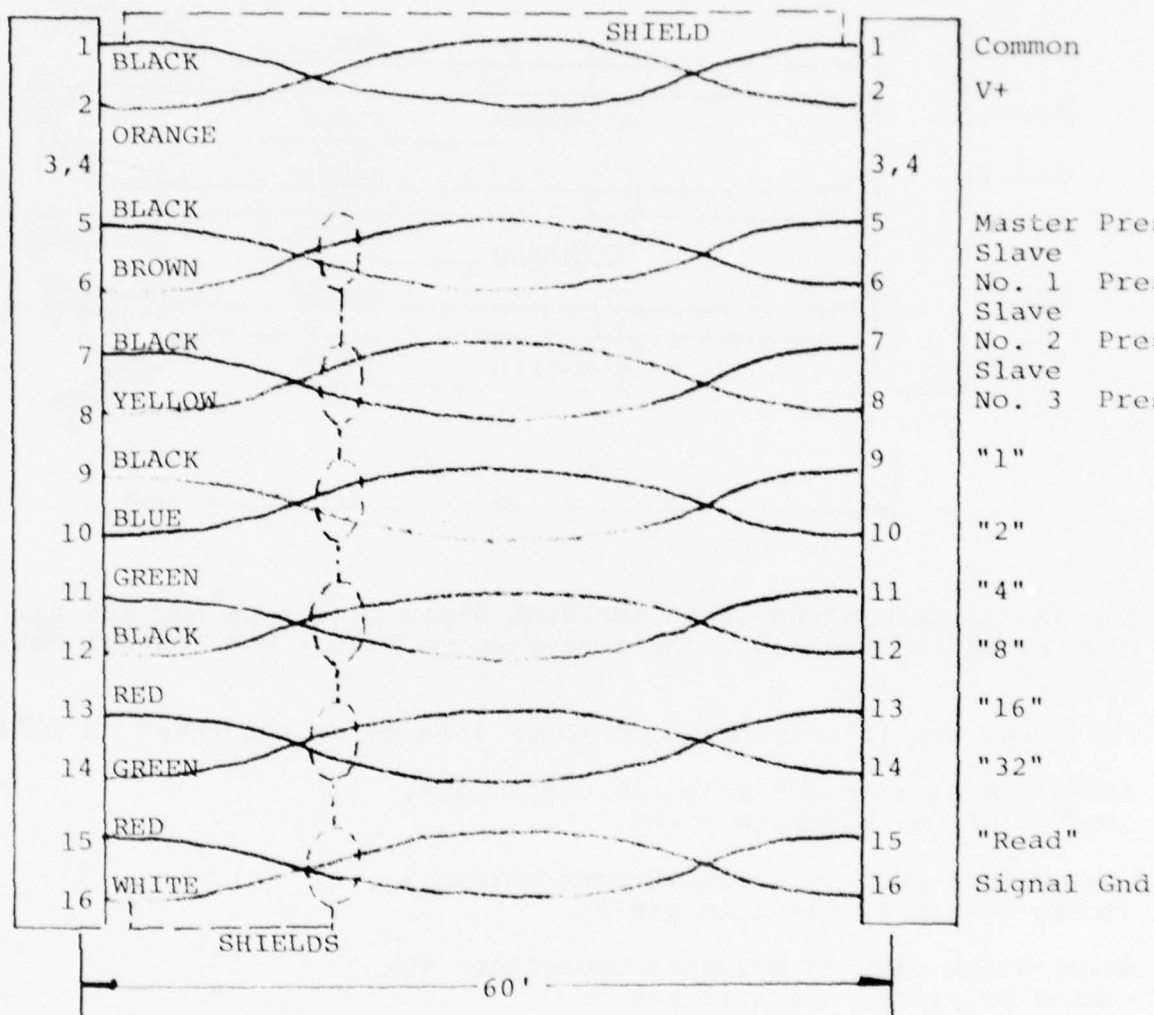


Both ends terminated in AMPHENOL 16-pin key locked shell plugs type no. 26-4501-16P.

The indicated end connects to the Master box output, the other end to the terminal box input.

# CABLE LIST (cont.)

Quantity 4

## SOLENOID POSITION FEEDBACK CABLE

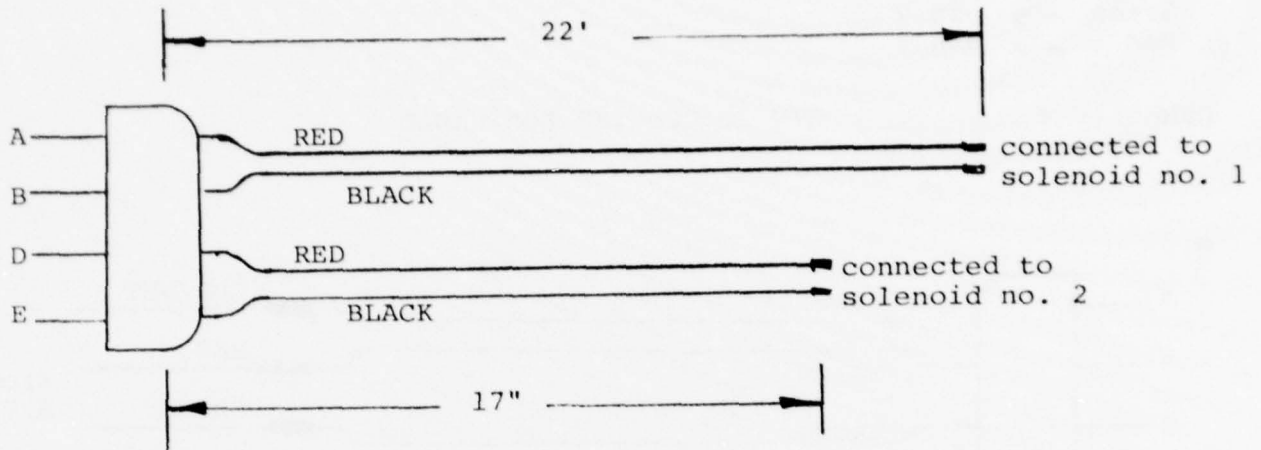


The free end of the cable is terminated in an AMPHENOL 5-pin plug type no. 126-010. The plug is painted black.

Connection is to be made from the solenoids to the solenoid position input socket on the corresponding Master or Slave box.

Quantity 4

## S/V DRIVE CABLE

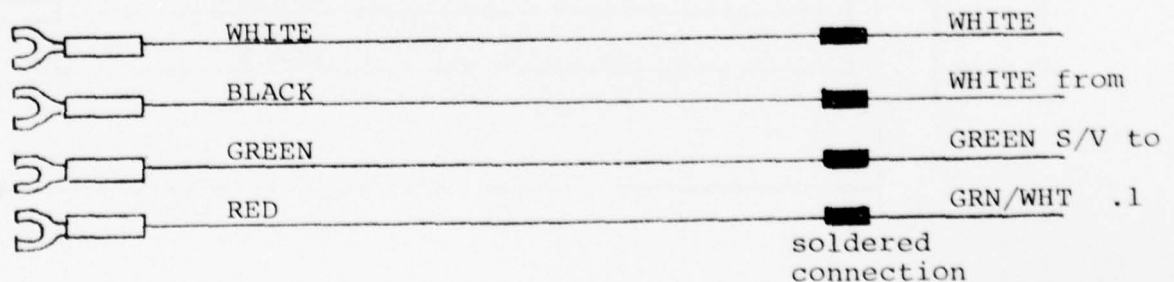

One end is connected to the scanivalve; the free end is terminated in spade lugs. This connected to the back of the scanivalve's


# CABLES LIST (cont.)

solenoid controller as follows:

White → pin 3  
 Black → pin 4  
 Green → pin 7  
 Red → pin 5

Quantity 4


S/V TO COUNTER BOX CABLE

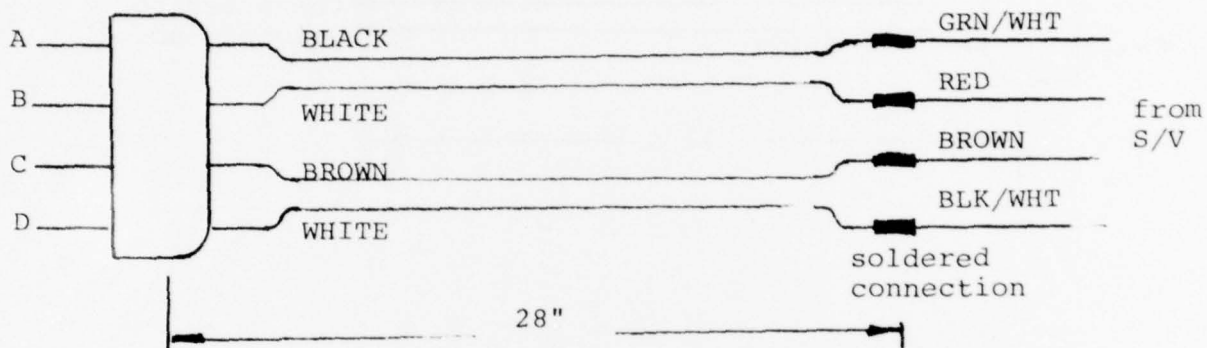

One end is connected to the scanivalve. The free end is terminated in an AMPHENOL 5-pin plug type no. 126-010. The plug is unpainted and makes connection to the back of the scanivalve channel counter box socket J102.

Quantity 1

MAIN POWER CABLE

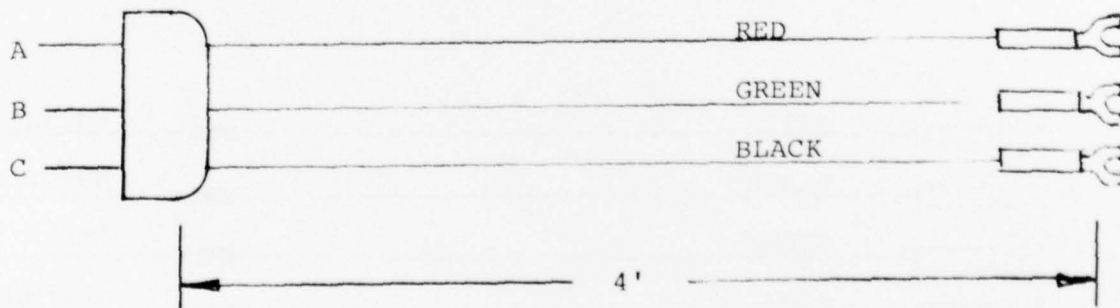

One end is terminated in spade lugs to the connected to the power supply as follows:

Red → +12v  
 Green → Gnd  
 Black → -12v




# CABLE LIST (cont.)

The other end is terminated in an AMPHENOL 3-pin plug type MS3102A-145, to be plugged into the side of the Master box in the main power in socket.

Quantity 8

## SOLENOID CONTROL CABLES

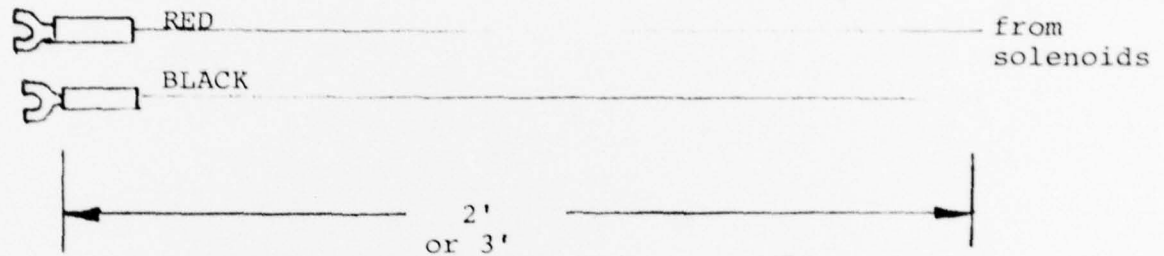


One end of each cable is connected to the solenoids controlling the bleed air. The 4 cables to the no. 1 solenoids are 2' long; the 4 cables to the no. 2 solenoids are 3' long.

The other end is terminated in spade lugs and is connected to the back of the solenoid controller as follow:

RED on pin 3  
BLACK on pin 4

Quantity 4

## S/V OUTPUT CABLES


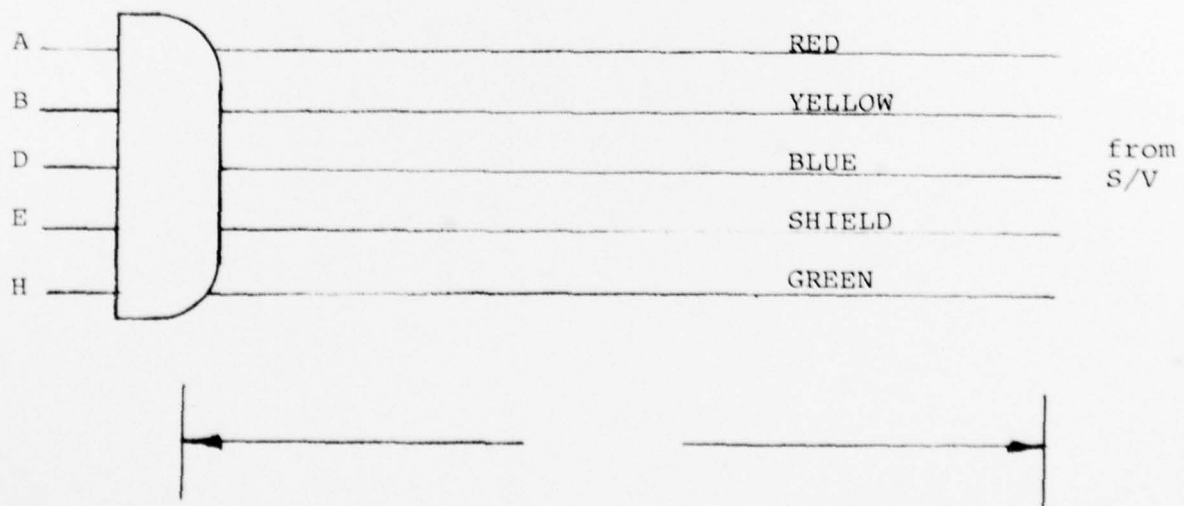


One end of the cable is connected to the pressure measuring transducer

# CABLES LIST (cont.)

internal to each scanivalve. The other end is terminated in an AMPHENOL 5-pin plug type no. 126-010 and is painted green. The cable is orange.

Connection is made to the Master box raw pressure input socket.

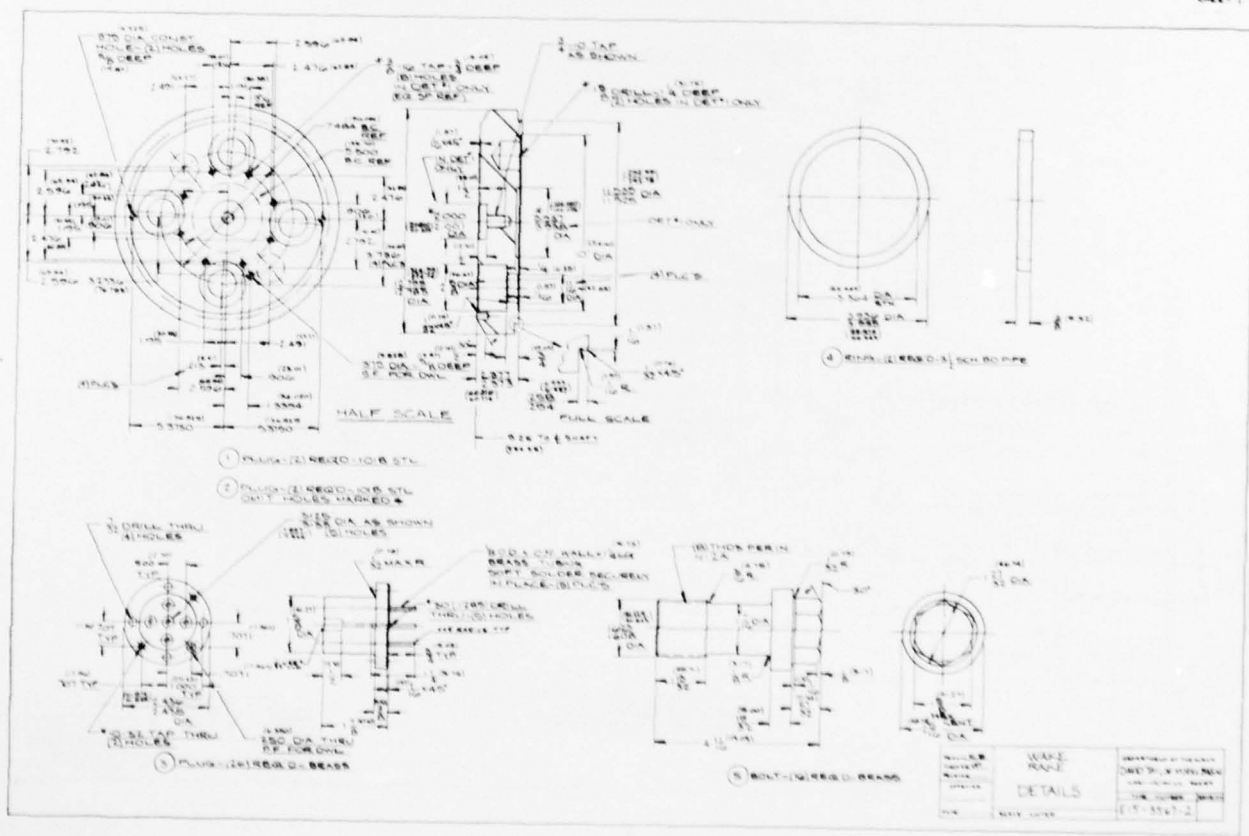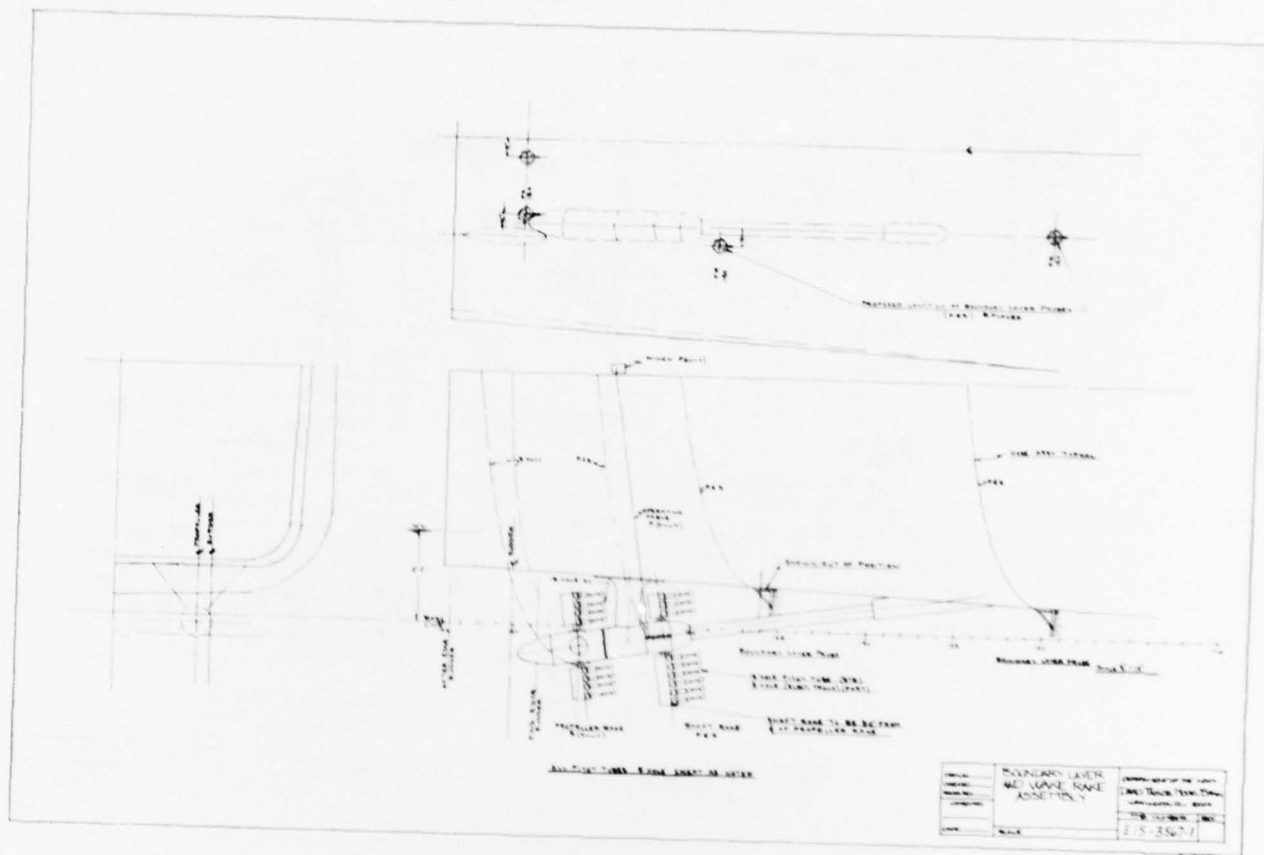















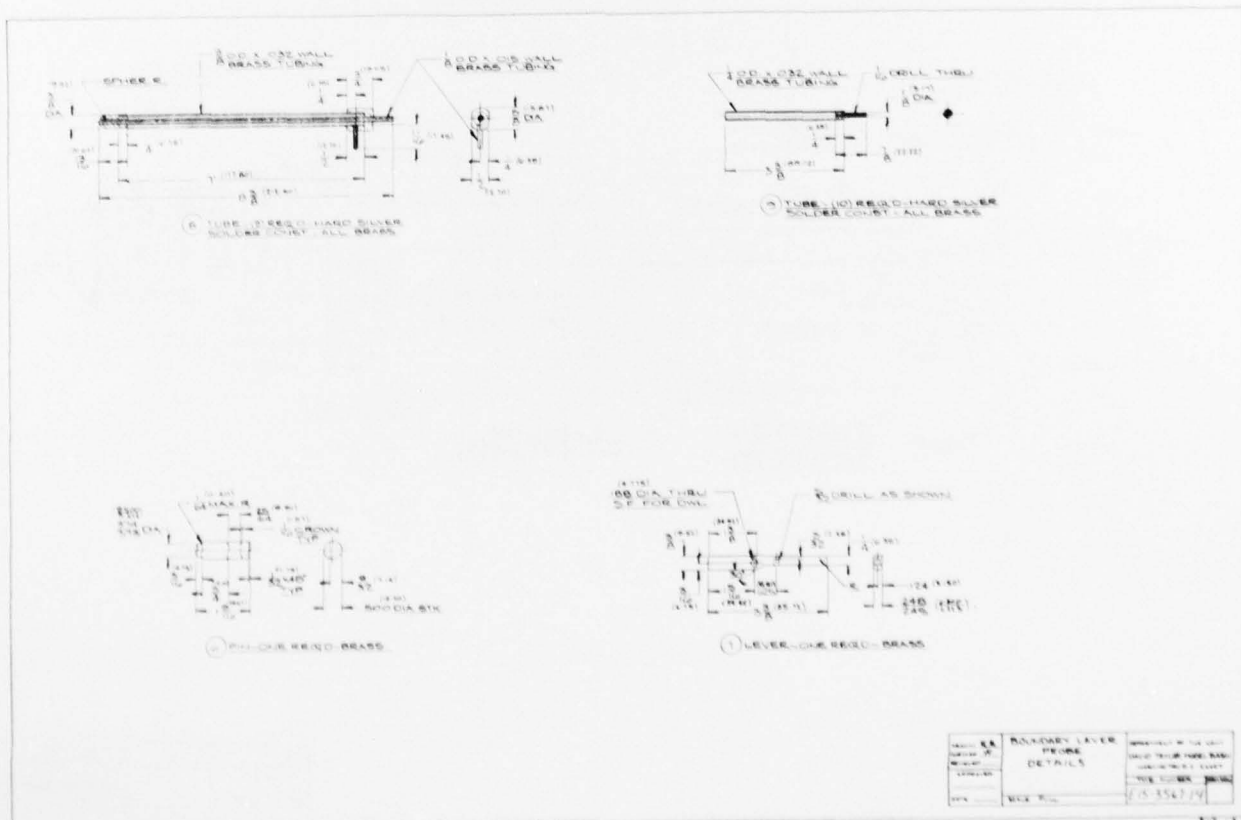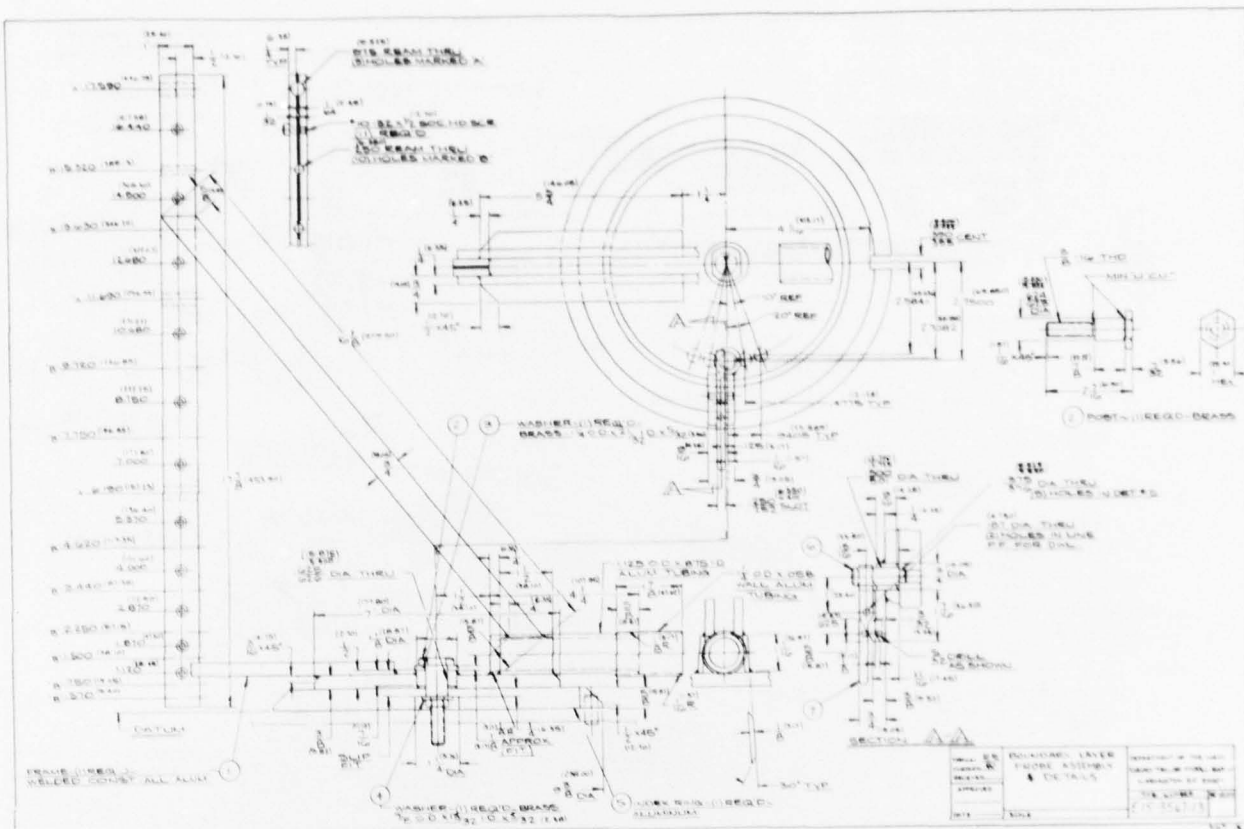









# INITIAL DISTRIBUTION

## Copies

2 CHONR  
 1 Code 438  
 1 Lib  
 1 USNA  
 1 Lib  
 4 NAVSEA  
 2 NAVSEA 05R  
 2 NAVSEA 05H  
 12 DDC  
 1 BUSTAND/KLEANOFF  
 1 US COAST GUARD (G-ENE-4A)  
 1 U CAL BERKELEY/DEPT NAME  
 1 CIT  
 1 Aero Lib  
 1 U IOWA  
 1 IHR/LANDWEBER  
 1 MIT  
 1 Ocean Engr/Lib  
 1 U MICHIGAN  
 1 NAME Lib  
 1 U MINNESOTA SAFHL  
 1 Killen

## Copies

1 PENN STATE U ARL  
 1 Lib  
 1 SIT DAVIDSON LAB  
 1 Lib  
 1 HYDRONAUTICS  
 1 Lib

## CENTER DISTRIBUTION

Copies	Code
1	15
1	152
1	1524
1	154
1	156 Hagen
1	1556 Santore
1	1962 Zaloumis
1	522.1 Library (C)
1	522.2 Library (A)